

# BDE-RFM207B USER GUIDE

## Introduction

This user guide is for BDE-RFM207B, a Wireless Module based on TI CC2652RB.

It is a quick start guide for how to connect the module with the evaluation board BDE-EVB07 or with the TI launchpad, and how to build the first application. It also shows a demo for how BDE-RFM207B receives a data packet that is sent from a mobile phone APP - Lightblue.

## Get Ready

The following tools are recommended to develop with BDE-RFM207B.

Hardware tools:

- BDE-RFM207B ([BDE-RFM207B-BDE Technology Inc. \(bdecomm.com\)](http://BDE-RFM207B-BDE Technology Inc. (bdecomm.com)))
- BDE-ADP05 V1.0 (adaptor board)
- PC or Laptop
- BDE-EVB07 ( [BDE-EVB07-BDE Technology Inc. \(bdecomm.com\)](http://BDE-EVB07-BDE Technology Inc. (bdecomm.com)))
- or
- TI Launchpad ([LAUNCHXL-CC26X2R1 Evaluation board | TI.com](http://LAUNCHXL-CC26X2R1 Evaluation board | TI.com))
- USB cable for power supply and debugging

Software tools:

- Terminal software such as CCS, IAR.
- [CCS download](#)
- [Software Development Kit \(SDK\)](#)
- [Lightblue](#)


## Build Your First Application

Once have the Hardware and Software tools in place, please following the following steps:


### A. Connect the Hardware

If chose EVB07:

Use USB cable to connect EVB07 and PC or laptop. Plug BDE-RFM207B with the adaptor board into the dev board and connect all the pins with Jumpers as the following picture shows.

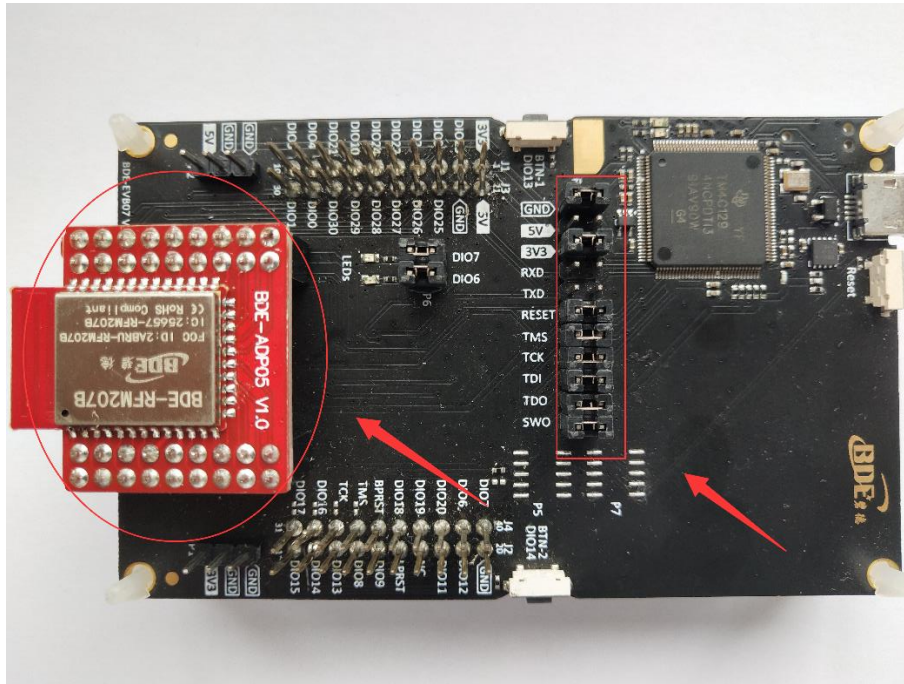

If chose TI Launchpad:  
The connection is as following.

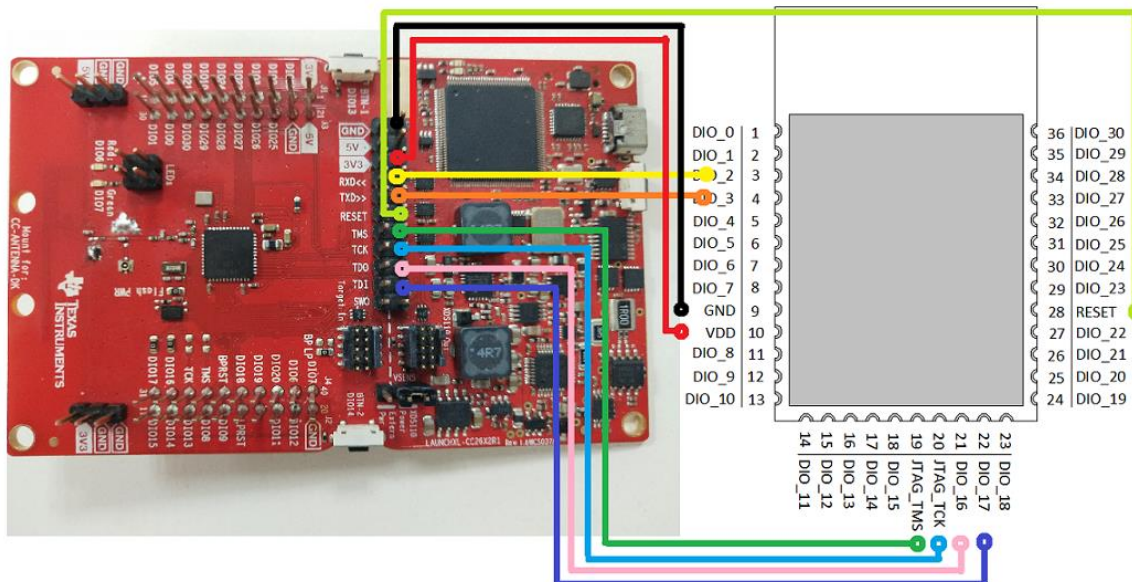

Connection Designator	BDE-RFM207B	LaunchPad Pin
3V3 Power	VDD	3V3
Ground	GND	GND
RST	RST	RESET
TMS	TMS	TMS
TCK	TCK	TCK
TDO	DIO16	TDO
TDI	DIO17	TDI
RXD	DIO2	RXD
TXD	DIO3	TXD

Optional: TDO, TDI, RXD, TXD


**B. Build the Application**

- **Download and install the CCS and SDK**

From the above links, follow the instructions in the following steps to download and install the CCS and SDK.

- **CCS Installation**

1. Click on this option

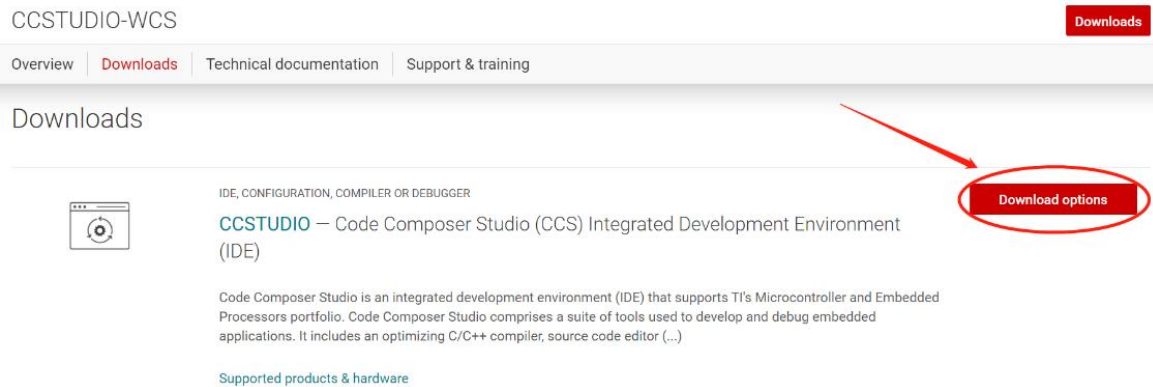

2. Select an option to download CCS

### Download options



#### Code Composer Studio (CCS) Integrated Development Environment (IDE)

Version: 10.3.0.00007  
Release date: 05 Apr 2021

##### SINGLE FILE INSTALLERS

[Windows single file installer for CCS IDE \(1181753652 KB\)](#)

[Linux single file installer for CCS IDE \(1102001729 KB\)](#)

[macOS single file installer for CCS IDE \(1083552986 KB\)](#)

##### ON-DEMAND INSTALLERS

[Windows on-demand installer for CCS IDE \(40136960 KB\)](#)

[Linux on-demand installer for CCS IDE \(25338386 KB\)](#)

[macOS on-demand installer for CCS IDE \(24595266 KB\)](#)


3. Unzip the package to a local disc

CCS10.3.0.00007_win64.zip	2021/4/19 11:11	WinRAR ZIP
CCS10.3.0.00007_win64	2021/4/20 11:36	文件夹


4. Click the setup of CCS

binary	2021/3/29 21:38
CCS10.3.0.00007_win64	2021/4/19 11:23
components	2021/3/29 21:38
features	2021/3/29 21:38
artifacts.jar	2021/3/29 21:38
<b>ccs_setup_10.3.0.00007.exe</b>	2021/3/29 21:37
content.jar	2021/3/29 21:38
README_FIRST_win64.txt	2021/3/29 21:38
timestamp.txt	2021/3/29 21:38


5. Click "Next"

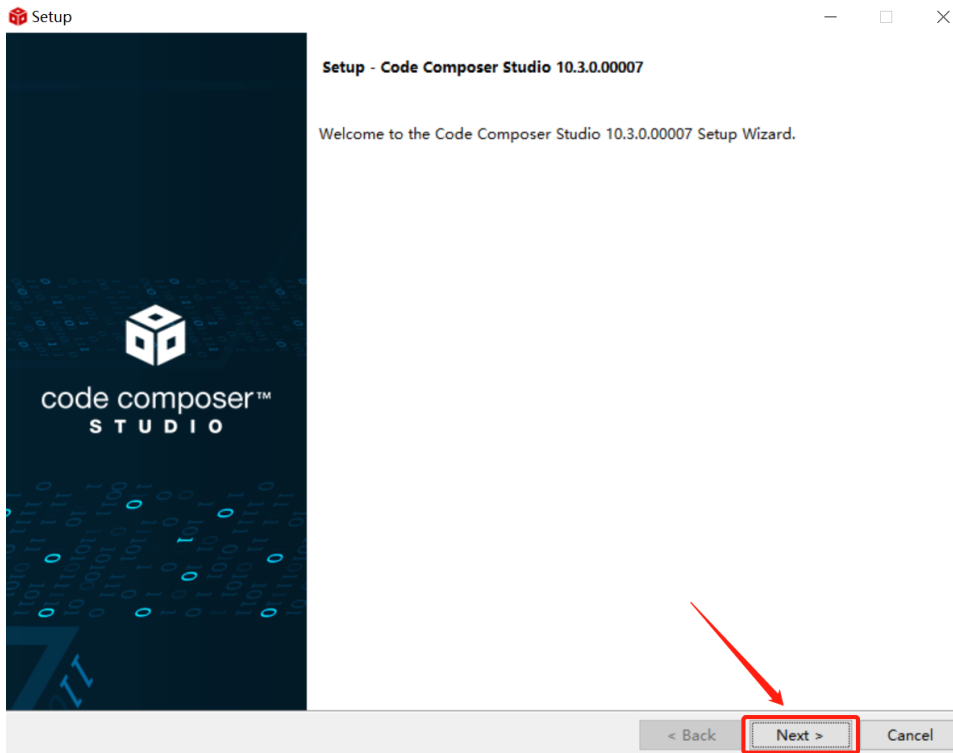


6. Select the default option

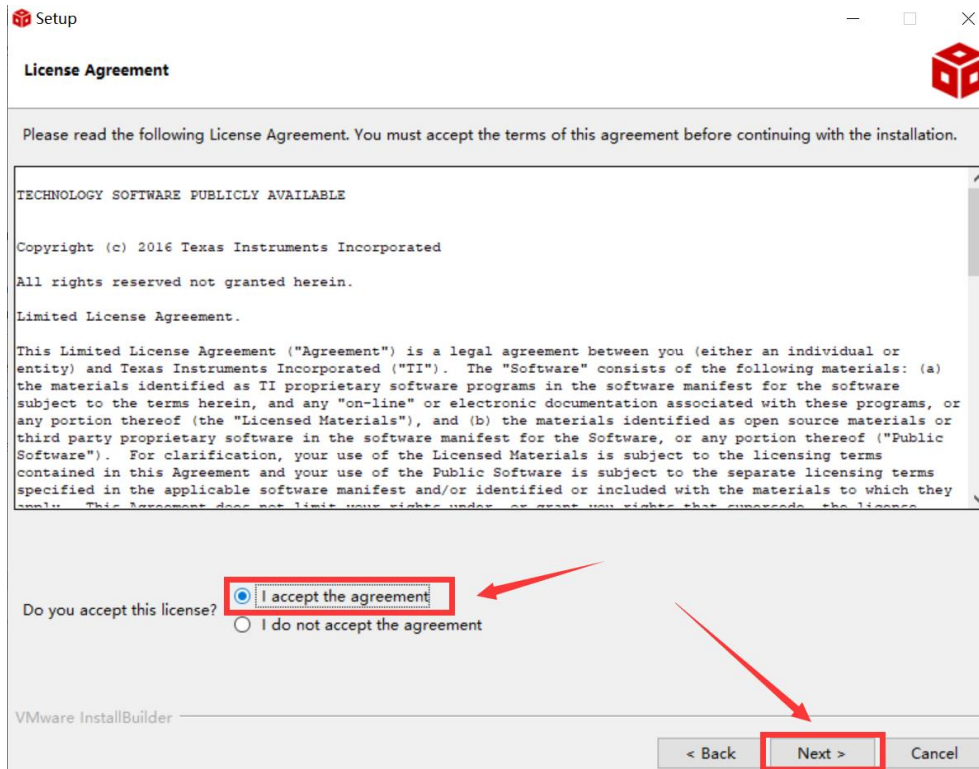


7. Click "Next"

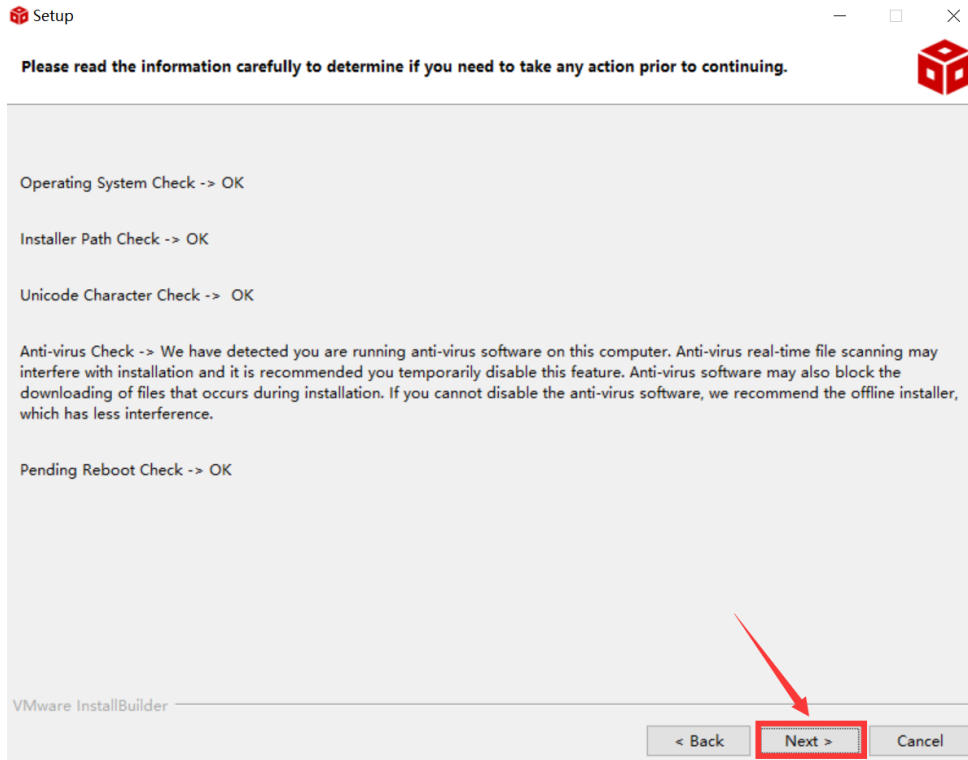


8. Select the Installation Directory

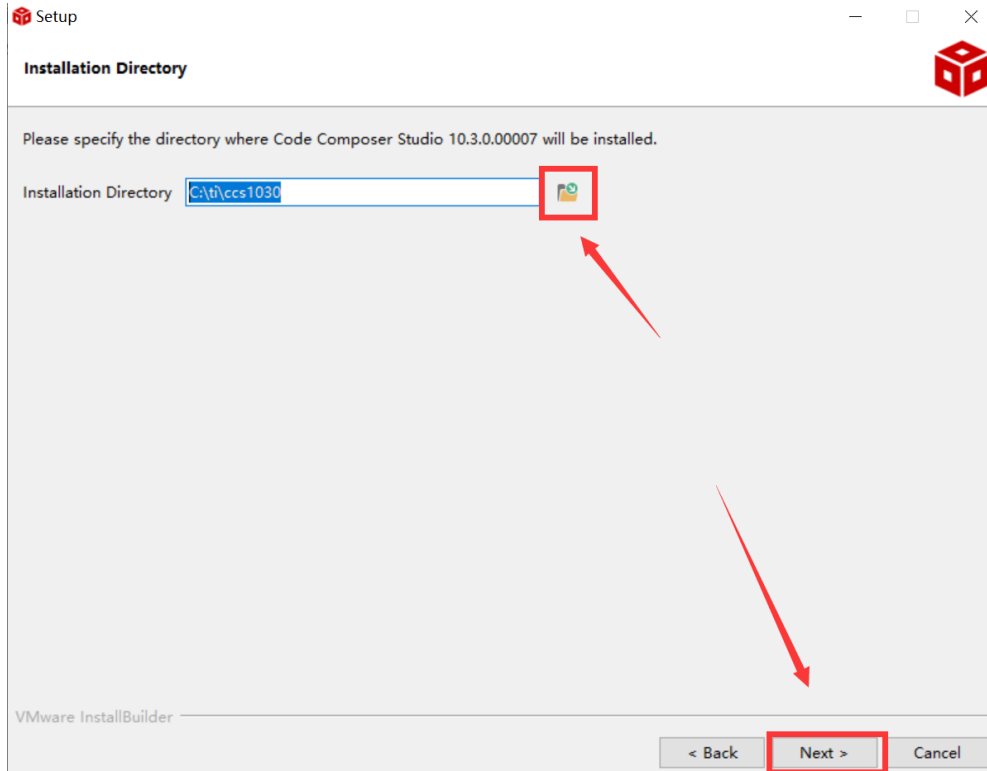

9. Select the default option

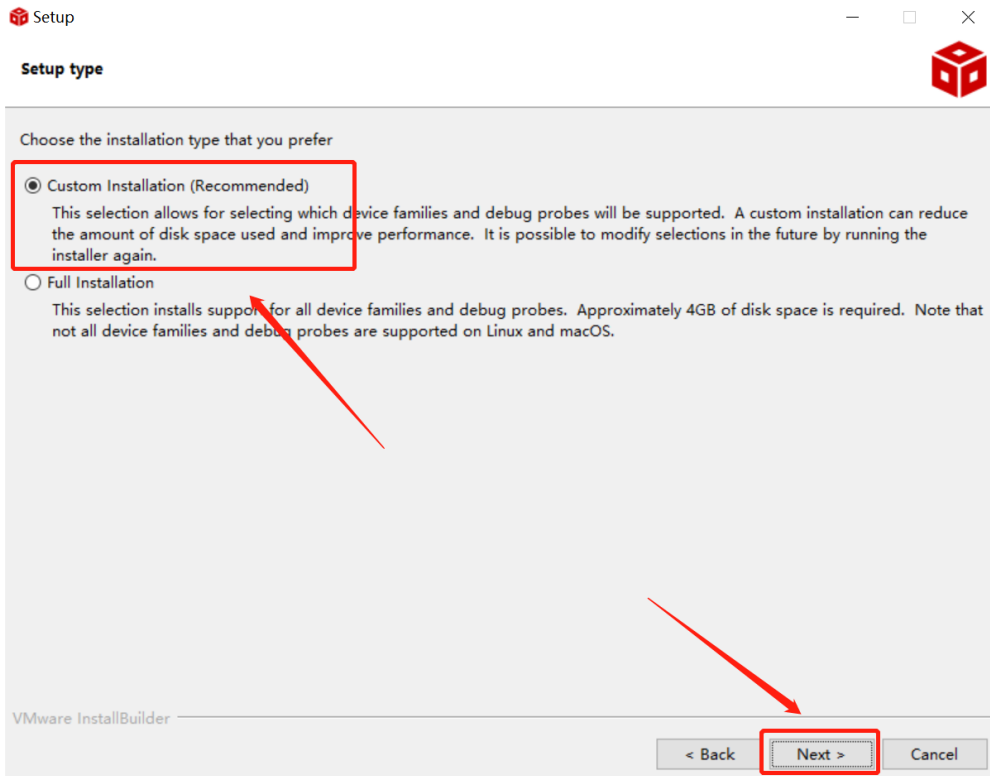


10. Select the component

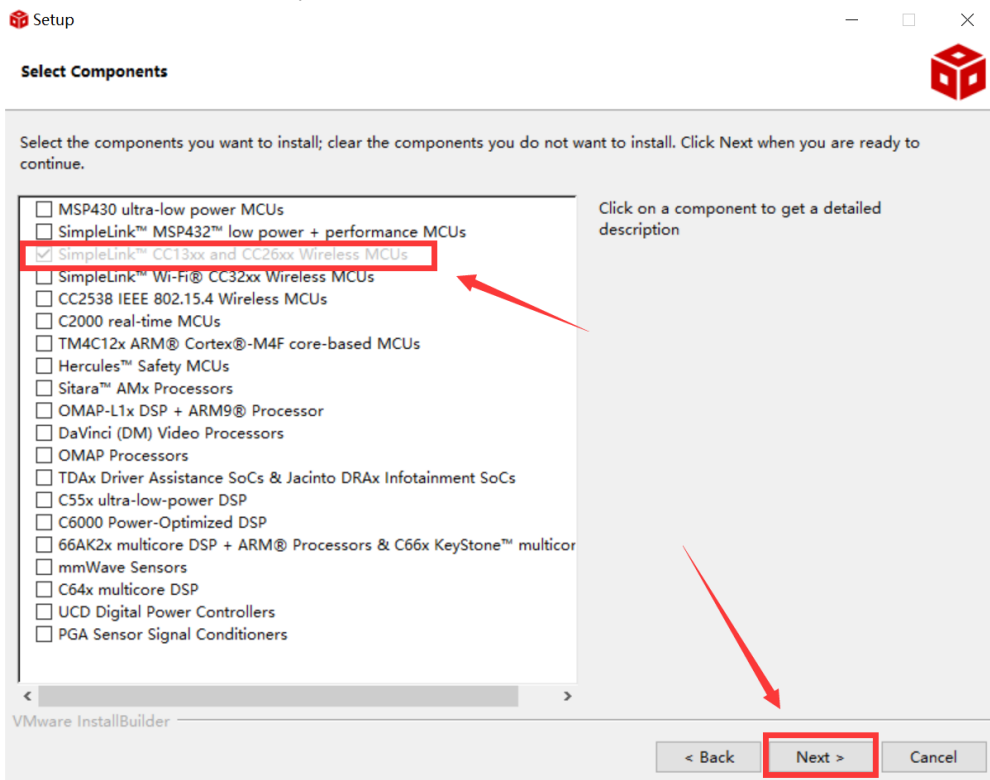




11. Select the default option

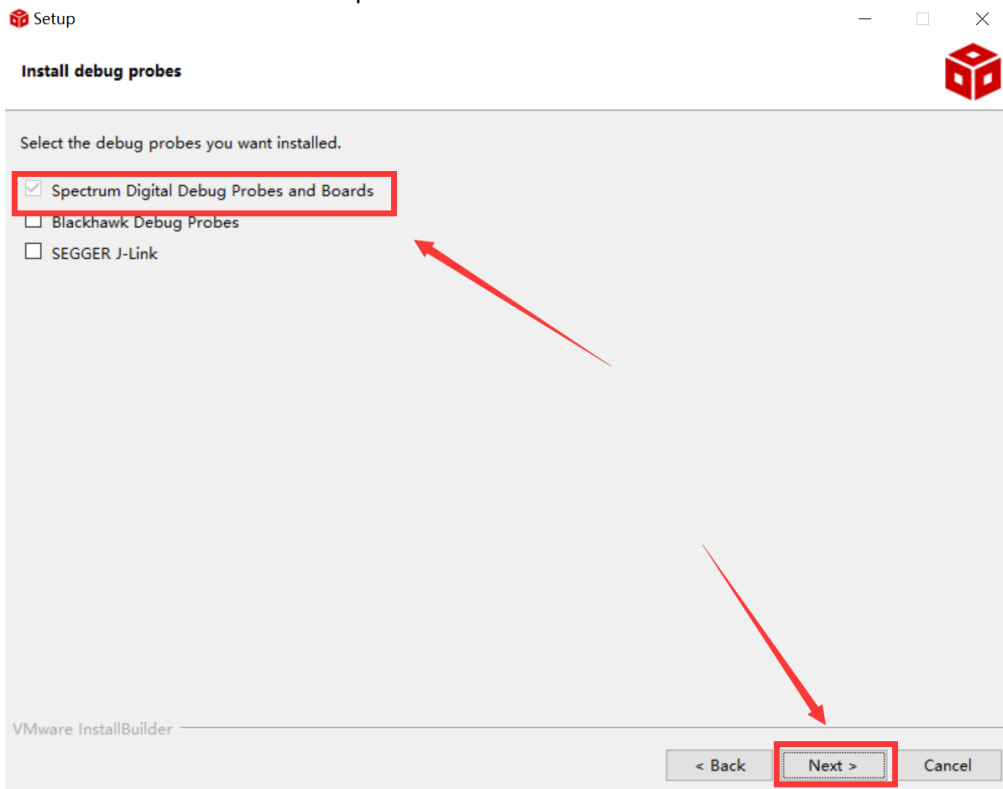


12. Click "Next"

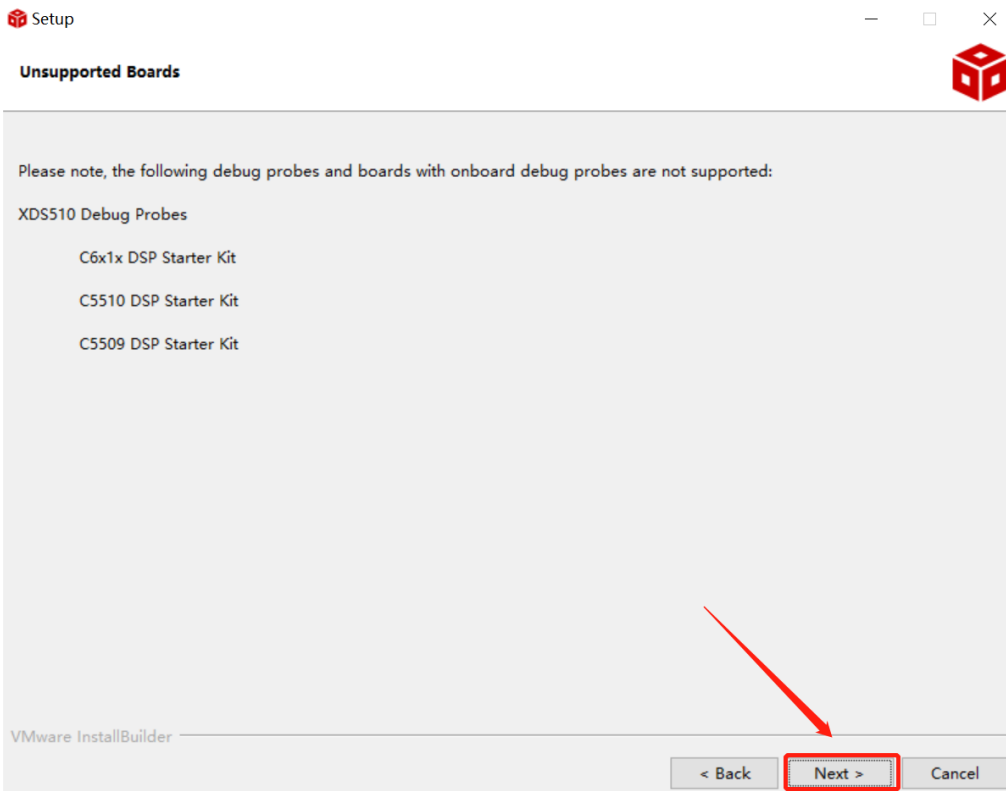




13. Click "Next"

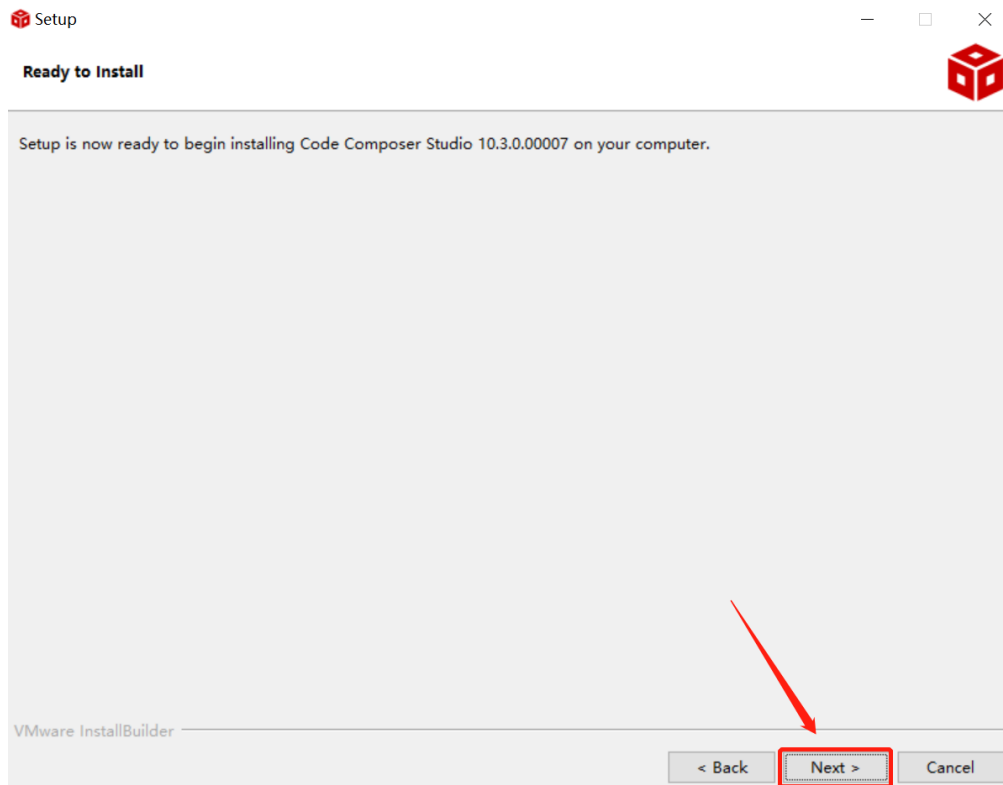


14. Waiting for installation to complete

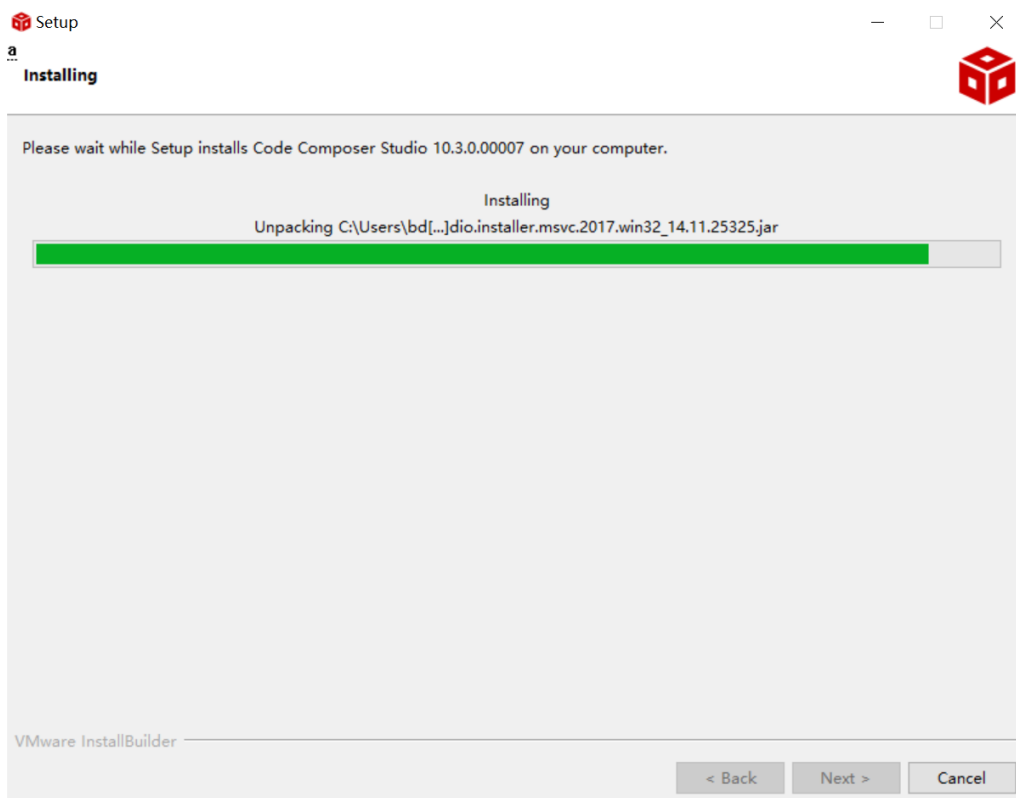


### Software Development Kit (SDK) installation

#### 1. Click on this option

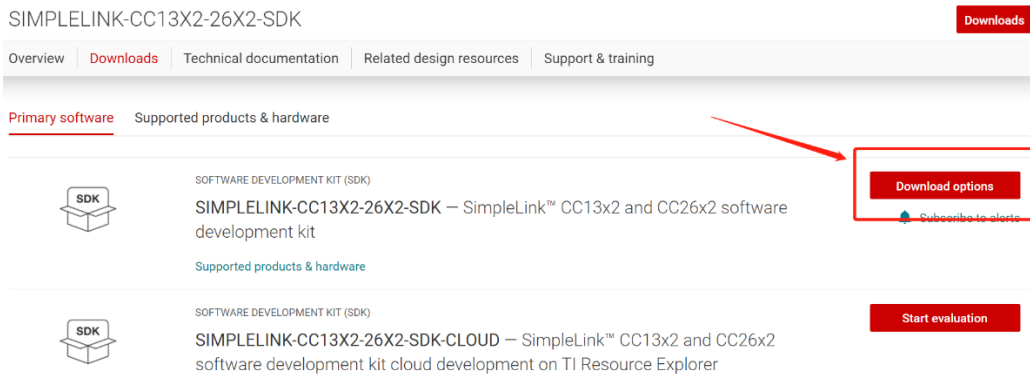

#### 2. Select an option you need to download SDK

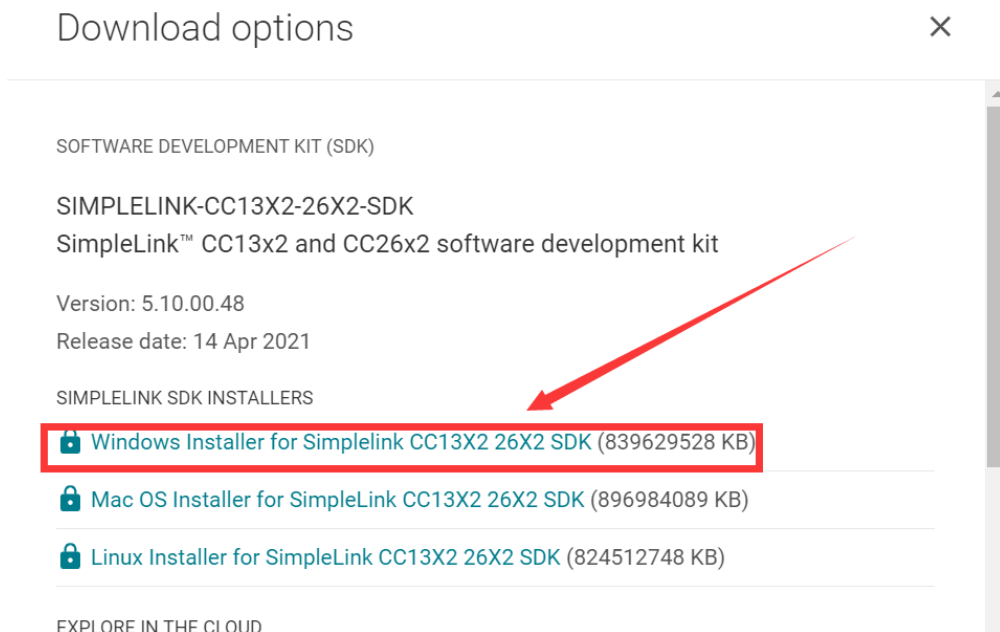

#### 3. Log in to your TI account, if you are a new user, register a TI account first

myTI account

[myTI FAQ](#)

### Existing myTI user?

Your email address

Your myTI password

Remember me

[Forgot your password?](#)

By logging in, you agree to TI's [Terms of use](#) & [Privacy policy](#).

- 4. Select "civil" if your application is for civil use

ort  
ll  
e will  
d 1-

### U.S. Government export approval:

All fields are Required. Incomplete information will be DENIED.

First name:

Last name:

Your email address:

Your full company/university name:

Country this file will be used in:

What end-equipment/application will you use this file for:

Military

Civil

I certify that the following is true:

5. Select "Yes" and submit

compliance with any such import, use, or export restrictions.

- I / We hereby certify that we will adhere to the conditions above.
- I / We do not know of any additional facts different from the above.
- I / We take responsibility to comply with these terms.
- I / We understand we are responsible to abide by the most current. versions of the Export Administration Regulations and other U.S. export and sanctions laws.

I CERTIFY ALL THE ABOVE IS TRUE:

Yes  No

Submit

Thank you,  
Texas Instruments

6. Download SDK

TI Home

## TI Request

You have been approved to receive this file.  
Click "Download" to proceed.


In a few moments, you will also receive an email with the link to this file.

Download


Having trouble downloading? Try [www.ti.com/software-help](http://www.ti.com/software-help)

Thank you,  
Texas Instruments

7. Installation

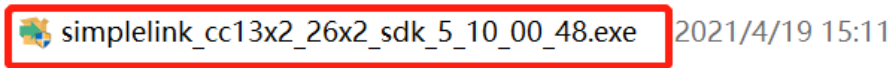


8. Click "Next"

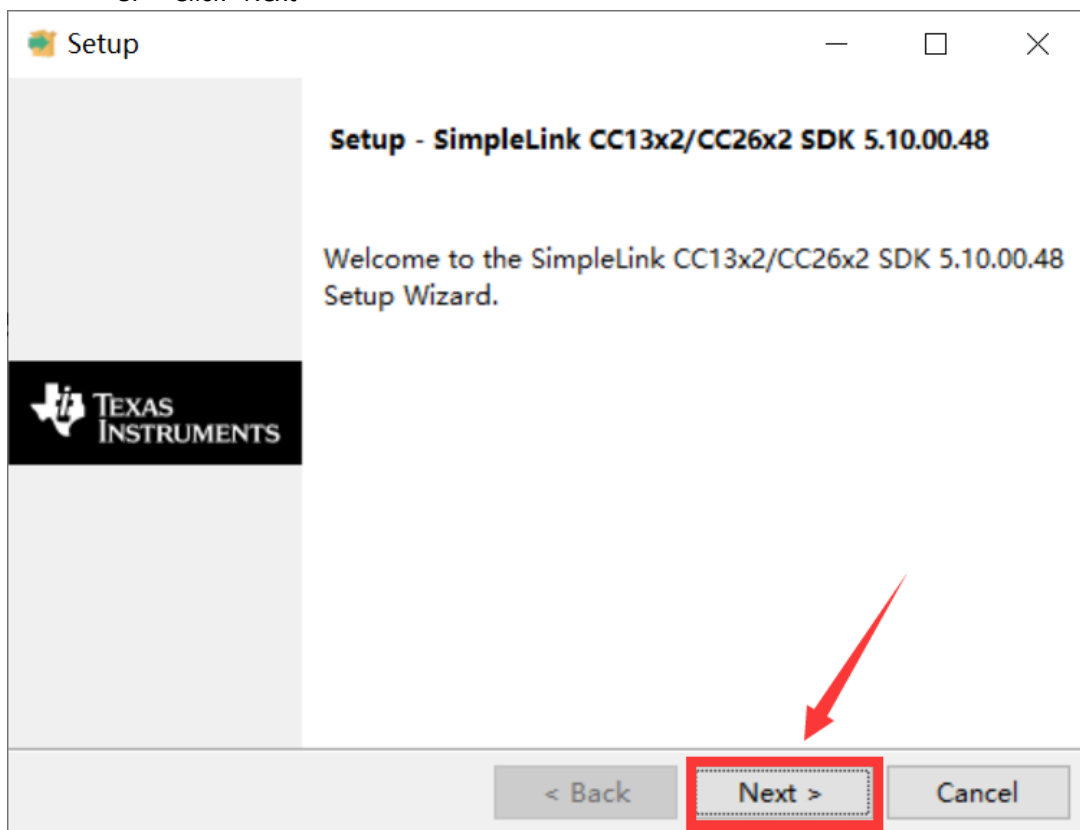


9. Select the default option




10. Select the Installation directory

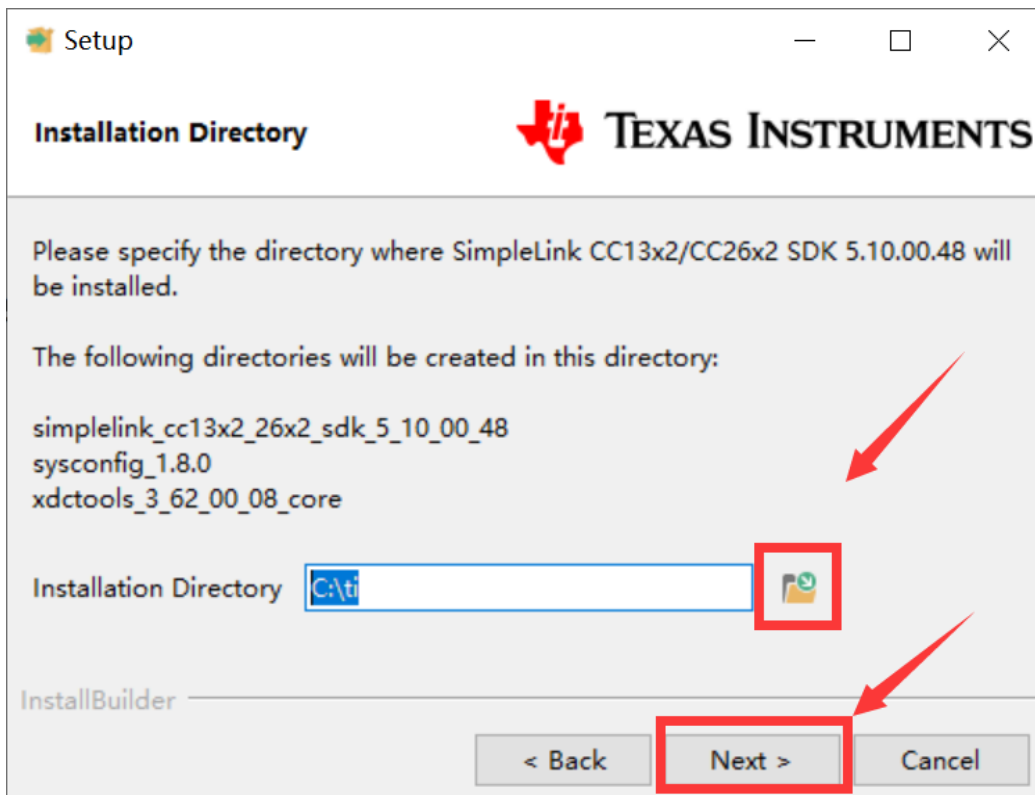

11. Click "Next"

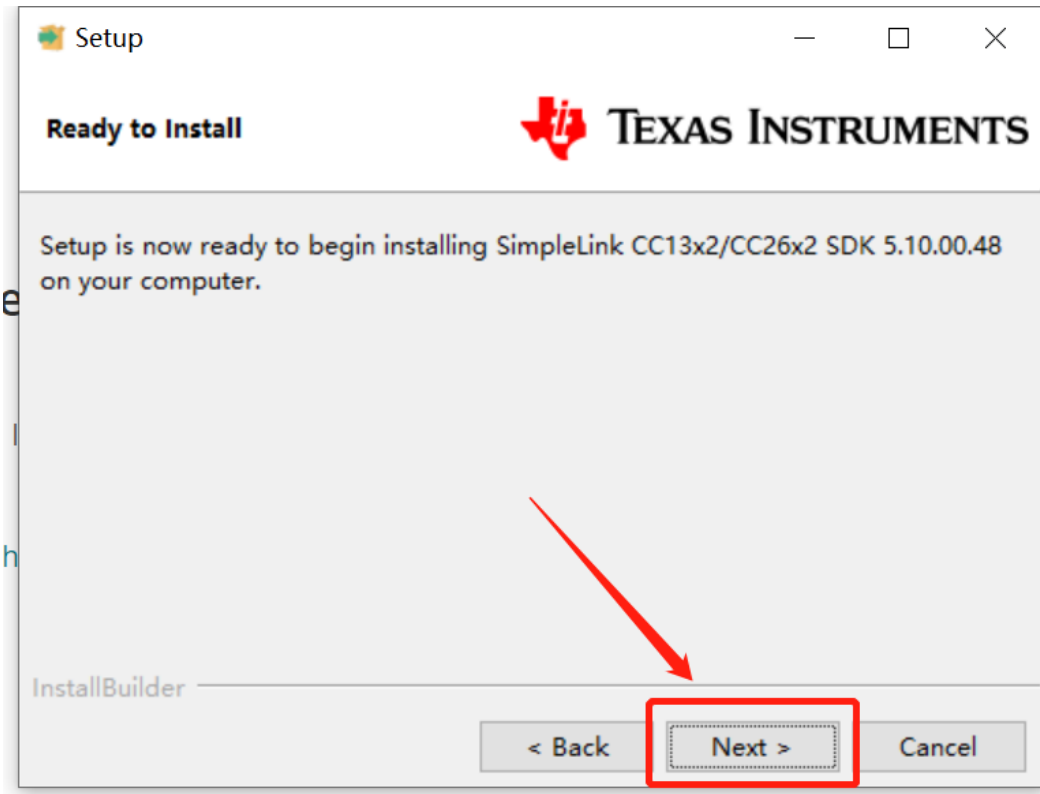


12. Waiting for installation to complete

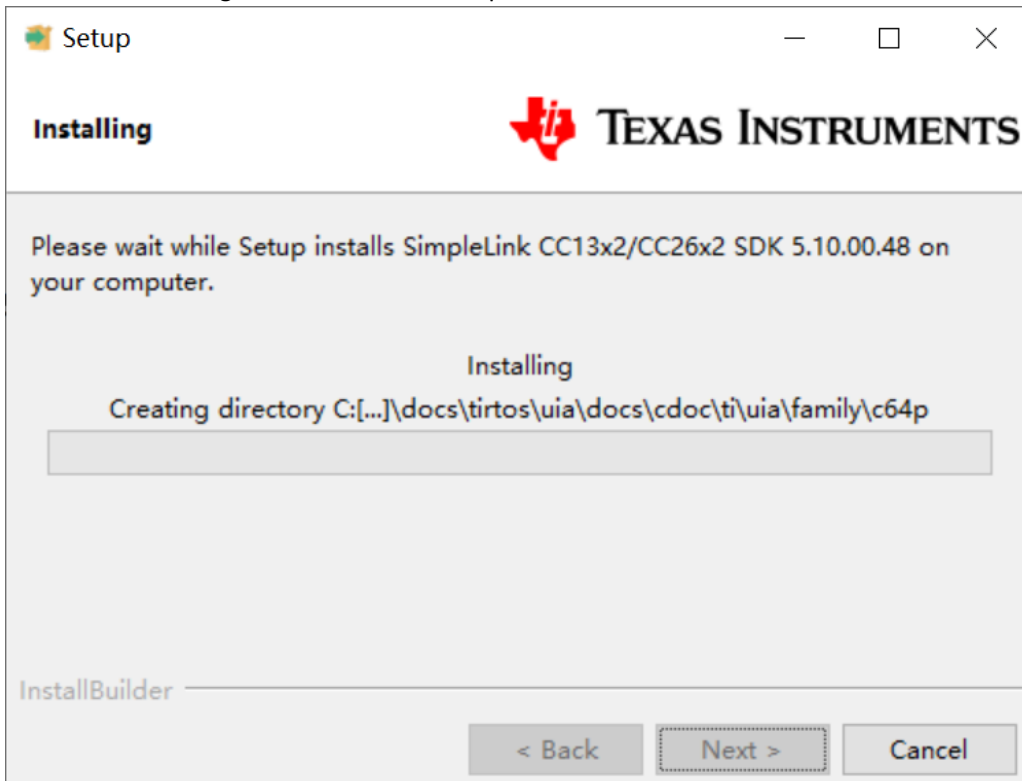





- Run an example/demo code
  - Find the option named "Import CCS project..."

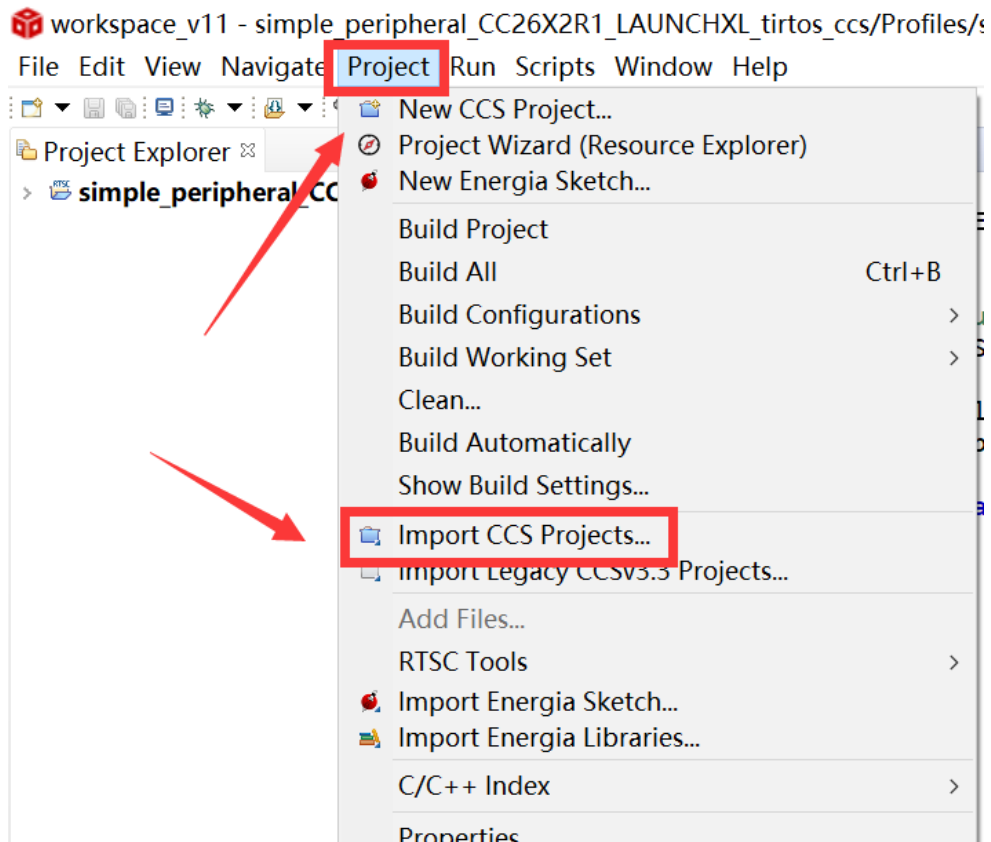


- According to the following path to find the project:  
ti\simplelink\_cc13x2\_26x2\_sdk\_5\_10\_00\_48\examples\rtos\CC26X2R1\_LAUNCHXL\ble5stack\simple\_peripheral\tirtos\ccs

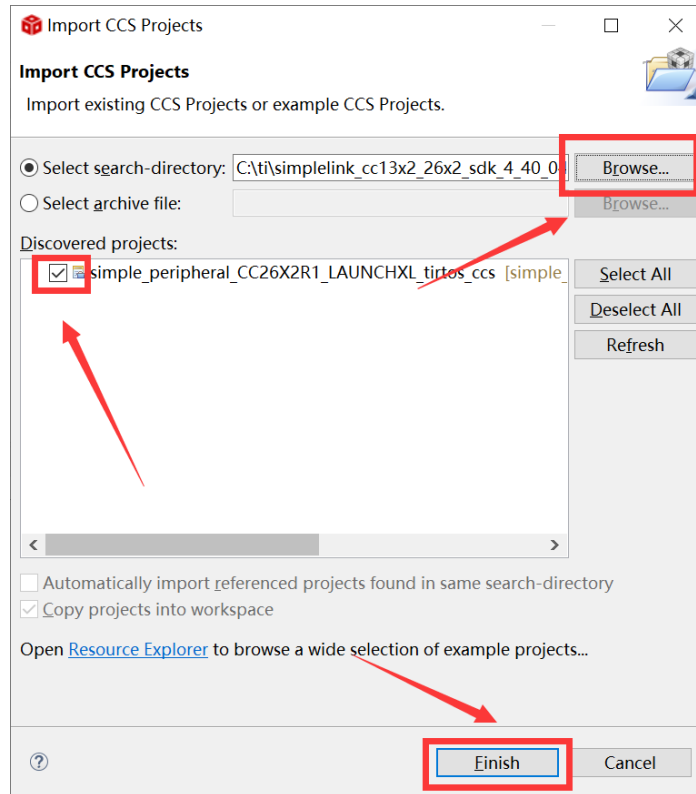


3. Right Click the project to build project

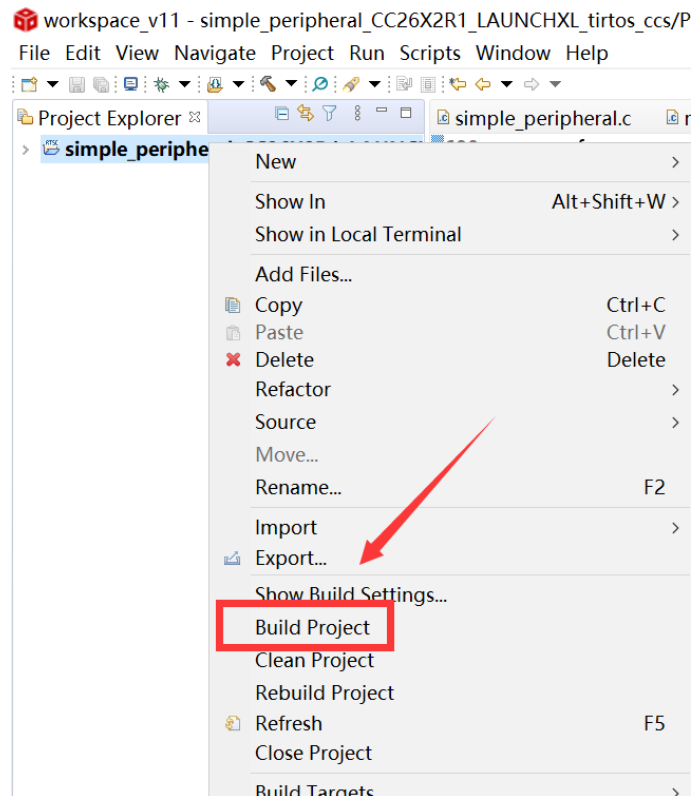


- Click this bug icon (means download and debugging)

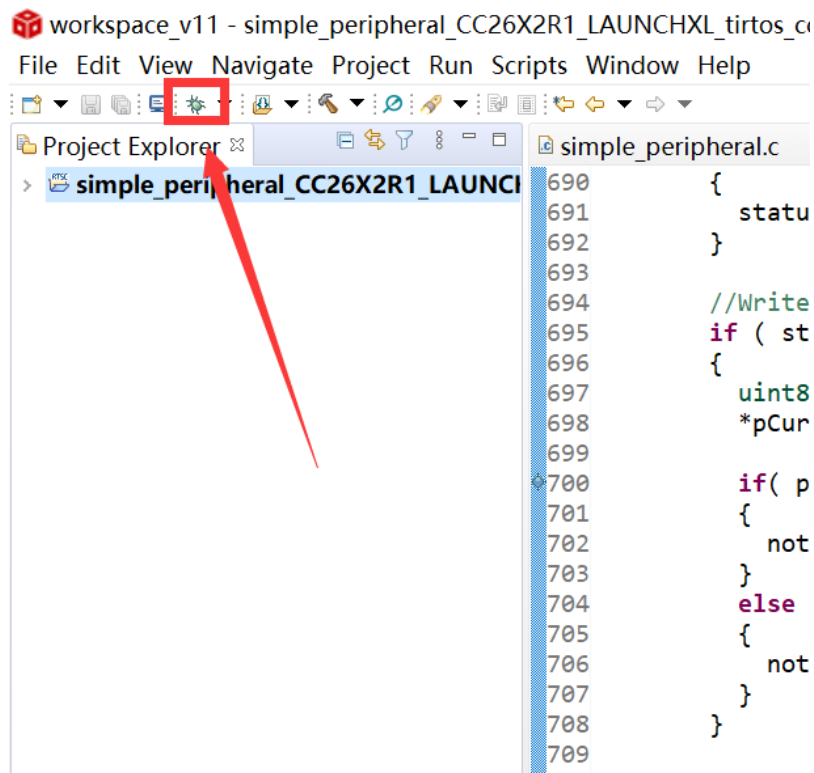

- [Download and start Lightblue](#) (an APP on your mobile device)
- Click on this option to start debugging

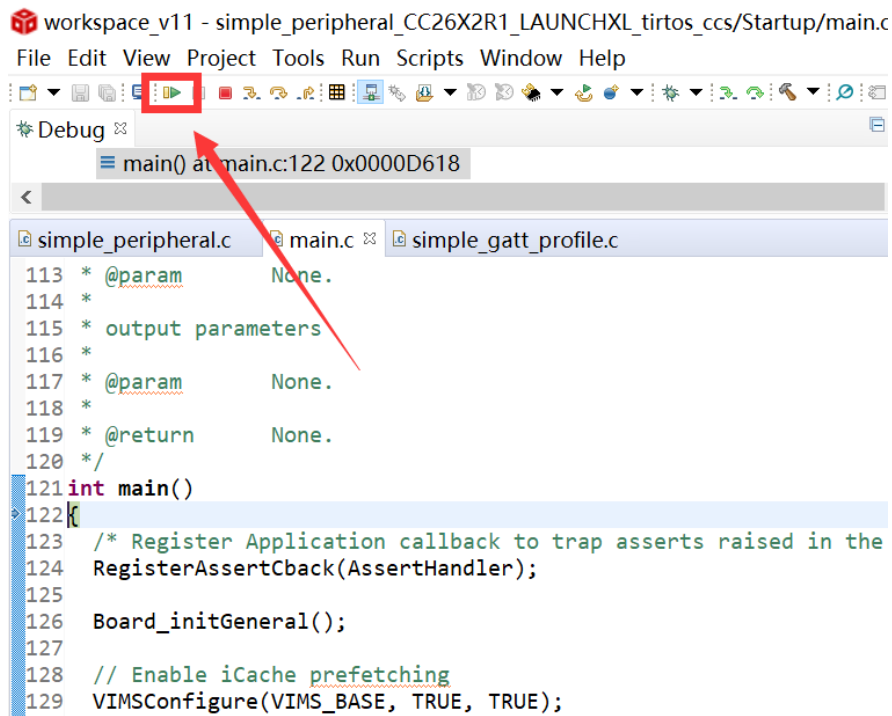

- 7. BDE-RFM207B is advertising, you can receive the signal on Lightblue, then click “connect” to connect the mobile phone and the BDE-RFM207B

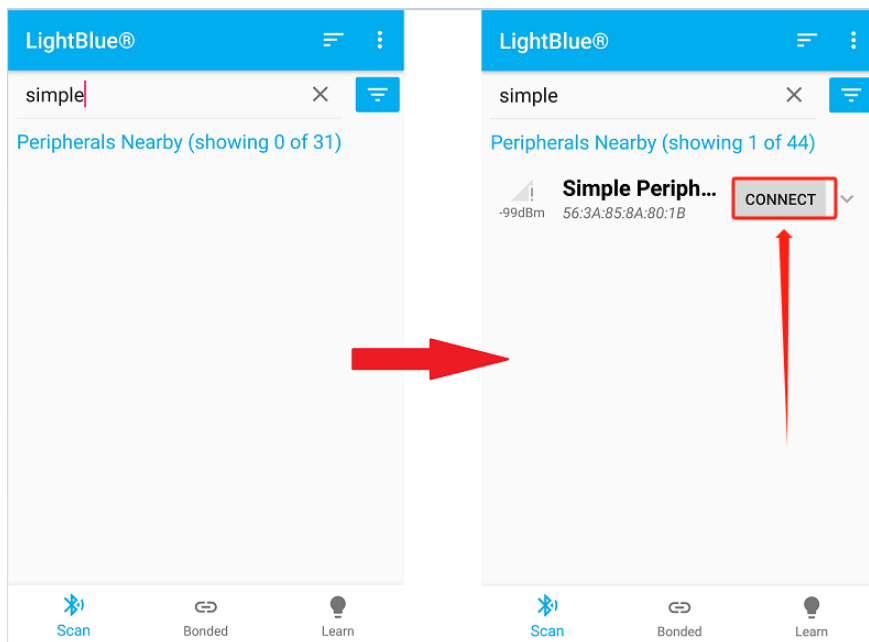

- 8. Find the file which is named “simple\_gatt\_profile.c” and the function which is named “simpleProfile\_WriteAttrCB”

```

workspace_v11 - simple_peripheral_CC26X2R1_LAUNCHXL_tirtos_ccs/Profiles/simple_gatt_p
File Edit View Project Tools Run Scripts Window Help
Debug
Texas Instruments XDS110 USB Debug Probe/Cortex_M4_0 (Running)
simple_peripheral.c main.c simple_gatt_profile.c
660 *AA
661 * @return SUCCESS, blePending or Failure
662 */
663 bStatus_t simpleProfile_WriteAttrCB( uint16_t connHandle,
664                                     gattAttribute_t *pAttr,
665                                     uint8_t *pValue, uint16_t len,
666                                     uint16_t offset, uint8_t method)
667 {
668     bStatus_t status = SUCCESS;
669     uint8 notifyApp = 0xFF;
670
671     if ( pAttr->type.len == ATT_BT_UUID_SIZE )
672     {
673         // 16-bit UUID
674         uint16 uuid = BUILD_UINT16( pAttr->type.uuid[0], pAttr->type.uuid[1] );
675         switch ( uuid )
676         {
677             case SIMPLEPROFILE_CHAR1_UUID:
678             case SIMPLEPROFILE_CHAR3_UUID:
679                 //Validate the value

```


9. Find “pValue” in the function and set a breakpoint at the same line

```


workspace_v11 - simple_peripheral_CC26X2R1_LAUNCHXL_tirtos_ccs/Profiles/simple_gat
File Edit View Project Tools Run Scripts Window Help
Debug
Texas Instruments XDS110 USB Debug Probe/Cortex_M4_0 (Running)
simple_peripheral.c main.c simple_gatt_profile.c
689     else
690     {
691         status = ATT_ERR_ATTR_NOT_LONG;
692     }
693
694     //Write the value
695     if ( status == SUCCESS )
696     {
697         uint8 *pCurValue = (uint8 *)pAttr->pValue;
698         *pCurValue = pValue[0];
699
700     if( pAttr->pValue == &simpleProfileChar1 )
701     {
702         notifyApp = SIMPLEPROFILE_CHAR1;
703     }
704     else
705     {
706         notifyApp = SIMPLEPROFILE_CHAR3;
707     }
708     }

```

10. Click the up arrow to send a message to the BDE-RFM207B

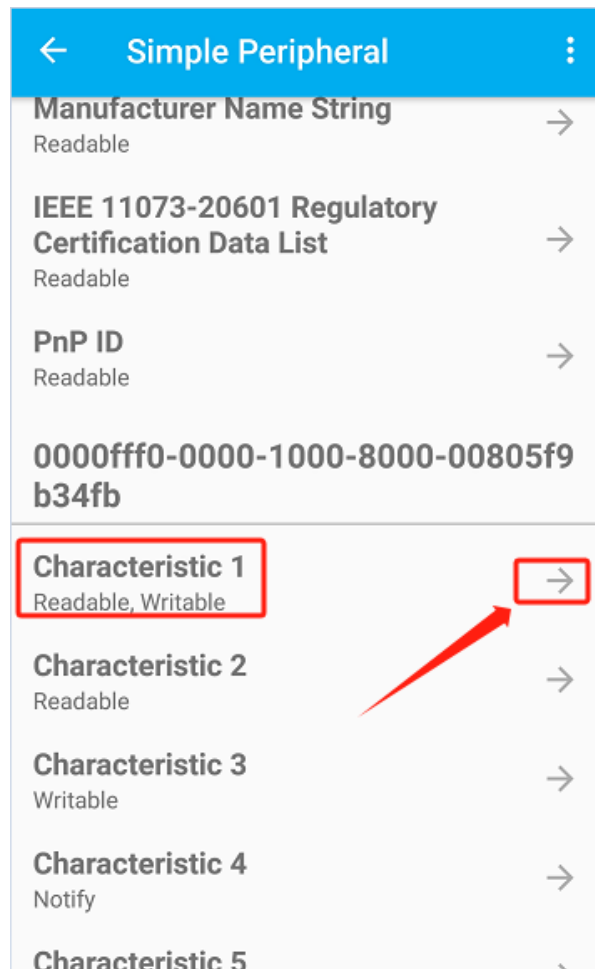


11. Send 0x11 to the BDE-RFM207B

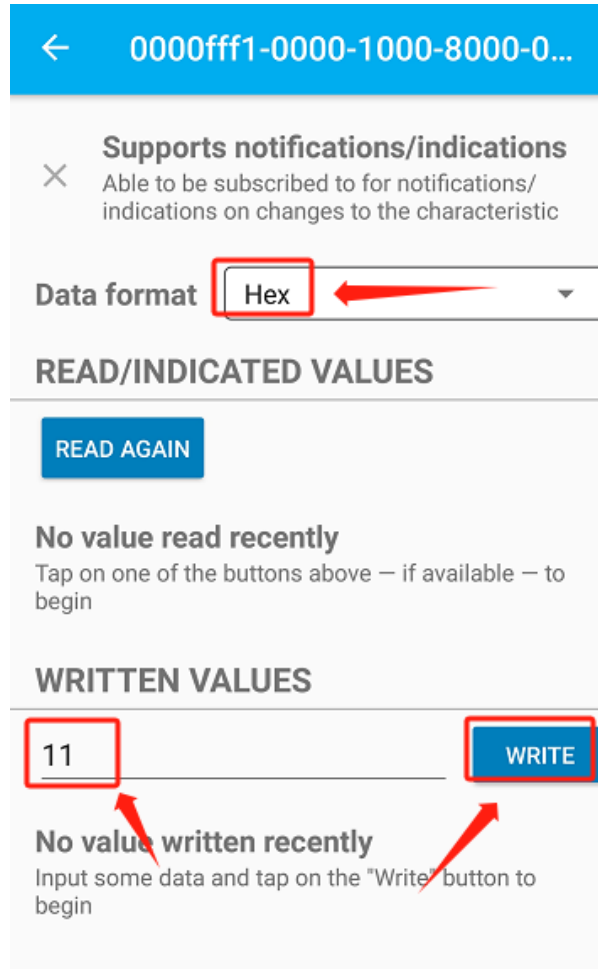

12. The program stops at the breakpoint, the value received is 0x11



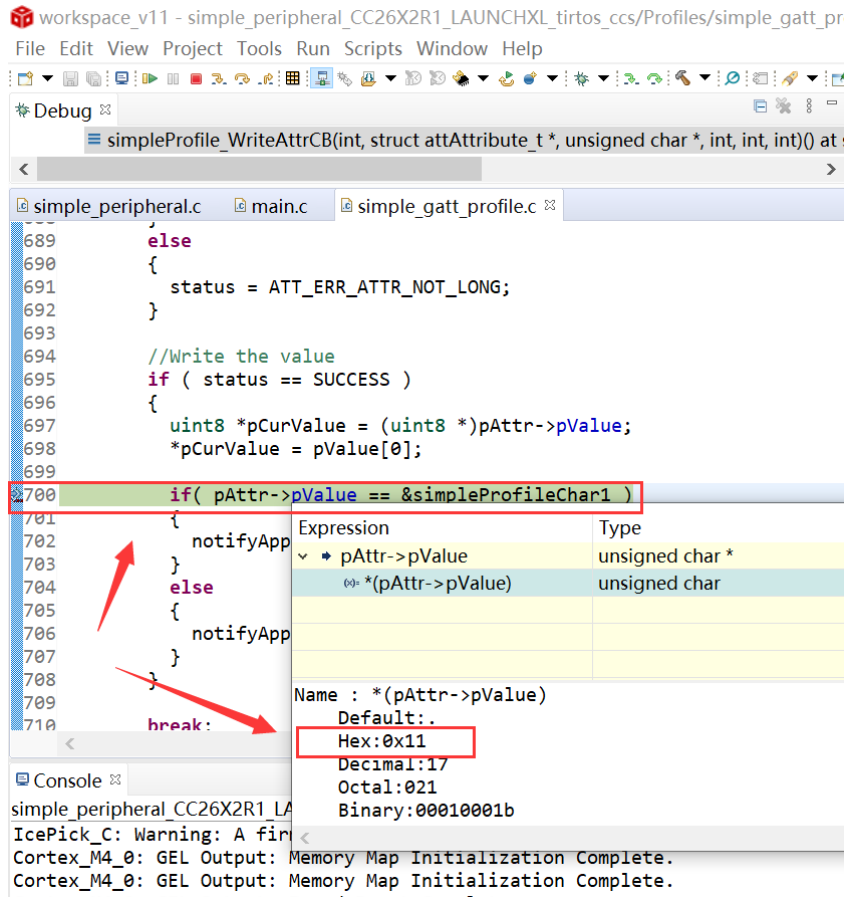

By far you should've built your first application successfully.

For further development, please check out the [CC2652RB data sheet, product information and support | TI.com](#) page and download the User guide (<https://www.ti.com/lit/pdf/swcu185>)

### Other Resources

[Mac OS Installer for SimpleLink CC13X2 26X2 SDK](#)

[Linux Installer for SimpleLink CC13X2 26X2 SDK](#)

[Mac OS Installer for Code Composer Studio IDE](#)

[Linux Installer for Code Composer Studio IDE](#)

[CC2652RB SimpleLink™ Crystal-less BAW Multiprotocol 2.4 GHz Wireless MCU](#)

[Windows Installer for SmartRF Flash Programmer 2](#)

## More Questions:

Please search existing answers on [TI E2E support forums](#)

Contact your local TI sales representative.

Or

Contact BDE Technology, Inc.

China:

B2-403, 162 Science Ave, Huangpu District, Guangzhou, 510663

Tel: +86-020-28065335

Website: <http://www.bdecomm.com/cn/> Email: [shu@bdecomm.com](mailto:shu@bdecomm.com)

USA:

67 E Madison St, #1603A, Chicago, IL 60603

Tel: +1-312-379-9589

Website: <http://www.bdecomm.com/> Email: [info@bdecomm.com](mailto:info@bdecomm.com)