

BDE-RFM207P USER GUIDE

Introduction

This user guide is for BDE-RFM207P, a Wireless Module based on TI CC2652P. It is a quick start guide for how to connect the module with the evaluation board BDE-EVB07 or with the TI launchpad, and how to build the first application. It also shows a demo for how BDE-RFM207P receives a data packet that is sent from a mobile phone APP - nRF Connect.

Get Ready

The following tools are recommended to develop with BDE-RFM207P.

Hardware tools:

- BDE-RFM207P (BDE-RFM207P-BDE Technology Inc. (bdecomm.com))
- BDE-ADP208 V1.0 (adaptor board)
- PC or Laptop
- BDE-EVB07 (<u>BDE-EVB07-BDE Technology Inc. (bdecomm.com)</u>)
 or
- TI Launchpad (LAUNCHXL-CC26X2R1 Evaluation board | TI.com)
- USB cable for power supply and debugging

Software tools:

- Terminal software such as CCS, IAR.
- CCS download
- Software Development Kit (SDK)
- nRF Connect

Build Your First Application


Once have the Hardware and Software tools in place, please following the following steps:

A. Connect the Hardware


If chose EVB07:

Use USB cable to connect EVB07 and PC or laptop. Plug BDE-RFM207P with the adaptor board into the dev board and connect all the pins with Jumpers as the following picture shows.



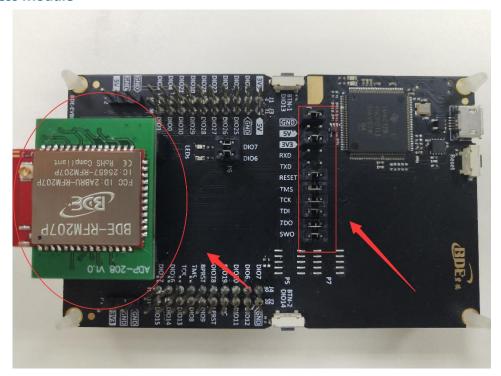

If chose TI Launchpad:
The connection is as following.

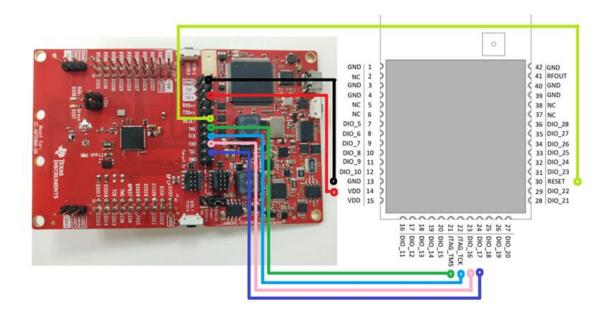

BDE-RFM207P USER GUIDE



Wireless Module User Guide

Connection Designator	BDE-RFM207P	LaunchPad Pin
3V3 Power	VDD	3V3
Ground	GND	GND
RST	RST	RESET
TMS	TMS	TMS
TCK	TCK	TCK
TDO	DIO16	TDO
TDI	DIO17	TDI


B. Build the Application

Download and install the CCS and SDK

From the above links, follow the instructions in the following steps to download and install the CCS and SDK.


CCS Installation

1. Click on this option

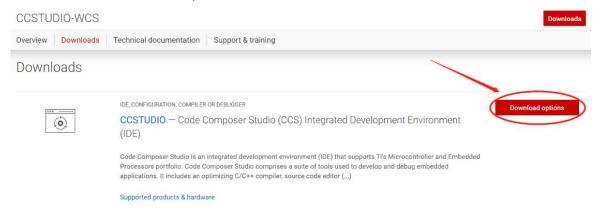



2. Select an option to download CCS



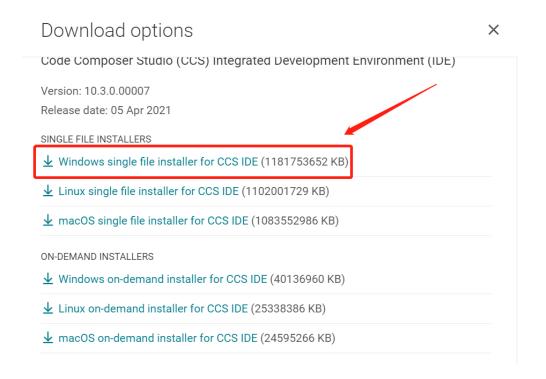


3. Unzip the package to a local disc

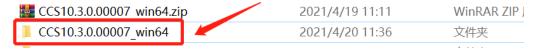

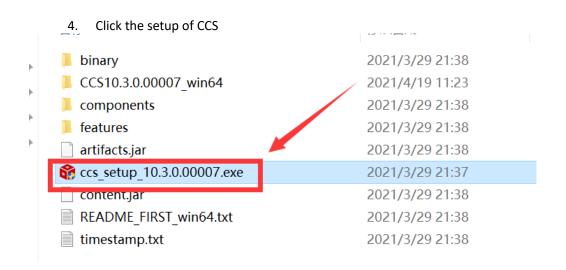




5. Click "Next"

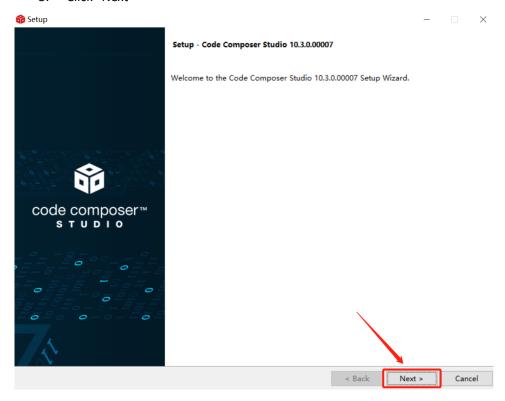


6. Select the default option

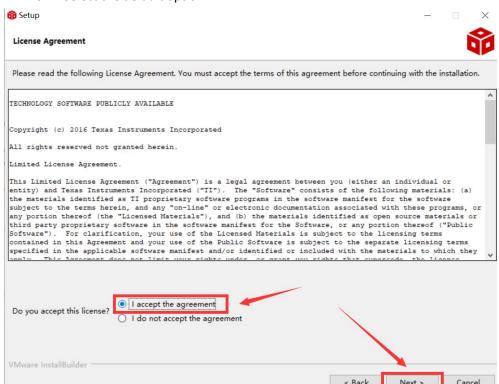




7. Click "Next"

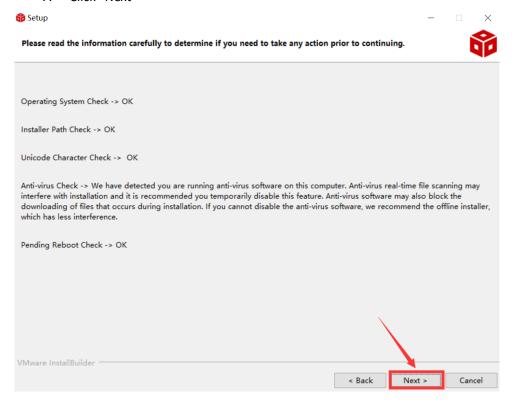


8. Select the Installation Directory

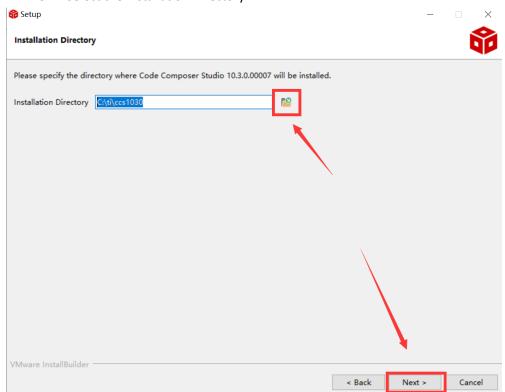




9. Select the default option

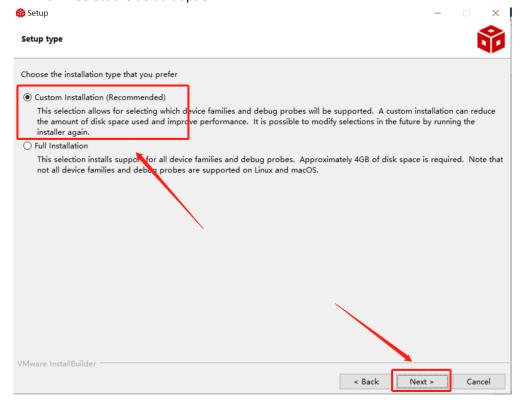


10. Select the component

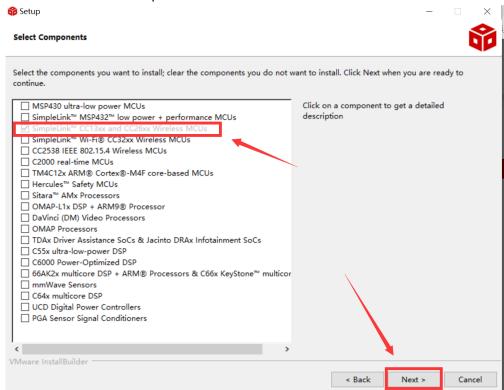







12. Click "Next"

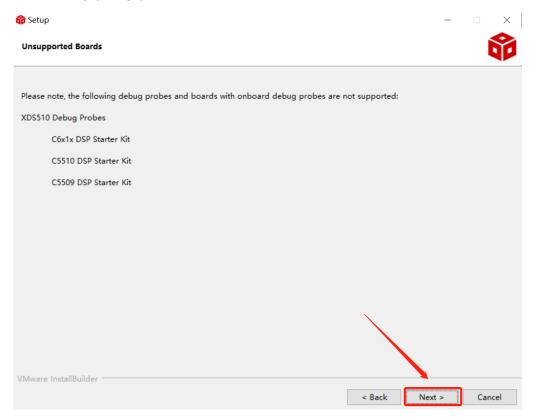



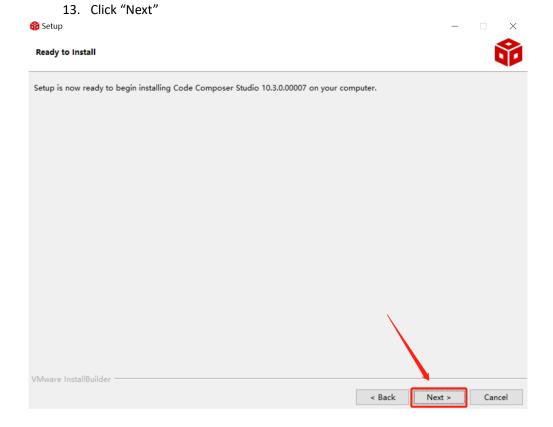


14. Waiting for installation to complete

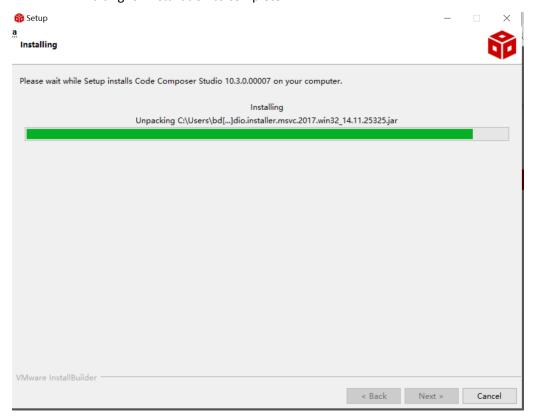




Software Development Kit (SDK) installation

1. Click on this option

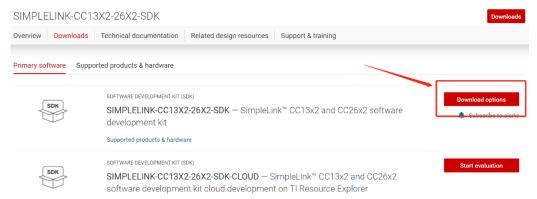

2. Select an option you need to download SDK

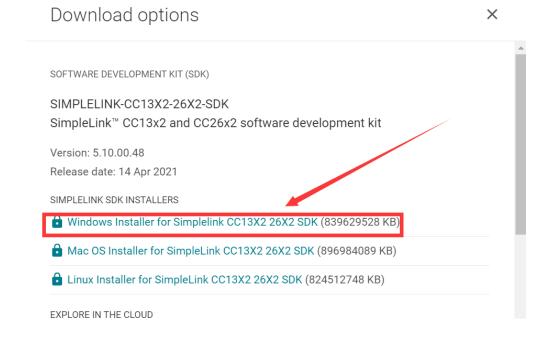


3. Log in to your TI account, if you are a new user, register a TI account first



myTl account

myTI FAQ

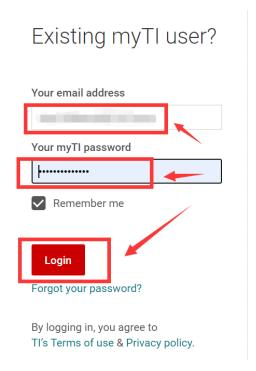

4. Select "civil" if your application is for civil use





5. Select "Yes" and submit

compliance with any such import, use, or export restrictions.

- I / We hereby certify that we will adhere to the conditions above.
- I / We do not know of any additional facts different from the above.
- I / We take responsibility to comply with these terms.
- I / We understand we are responsible to abide by the most current. versions
 of the Export Administration Regulations and other U.S. export and
 sanctions laws.



6. Download SDK

TI Home

TI Request

You have been approved to receive this file. Click "Download" to proceed.


In a few moments, you will also receive an email with the link to this file.




Thank you, Texas Instruments

7. Installation



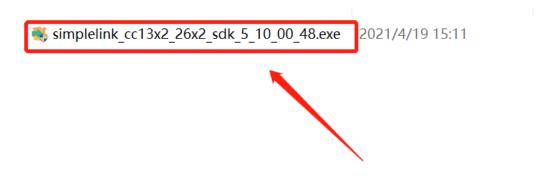


8. Click "Next"

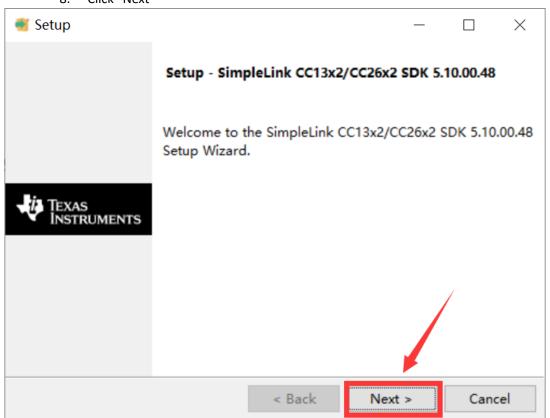


9. Select the default option



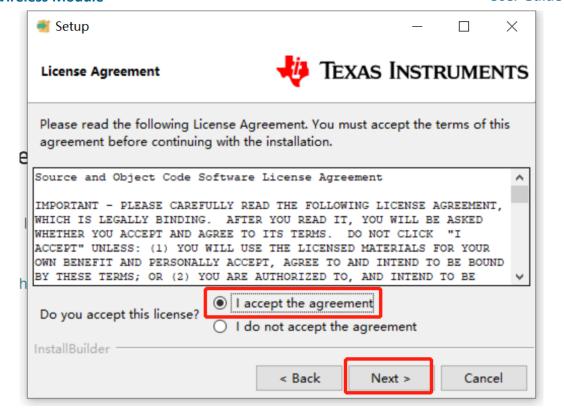


10. Select the Installation directory

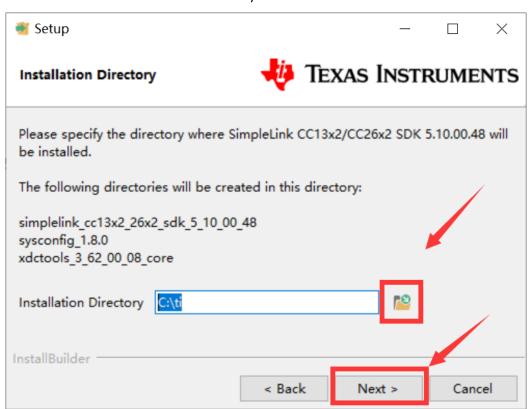




11. Click "Next"

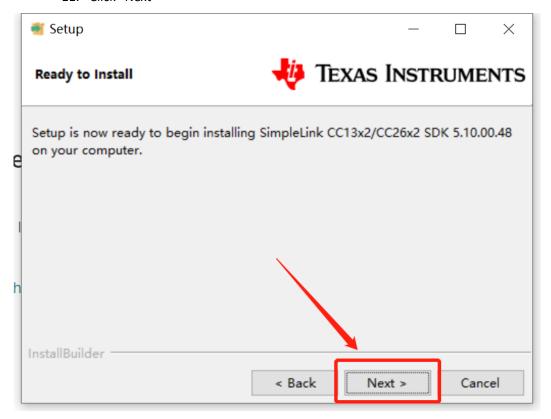


12. Waiting for installation to complete

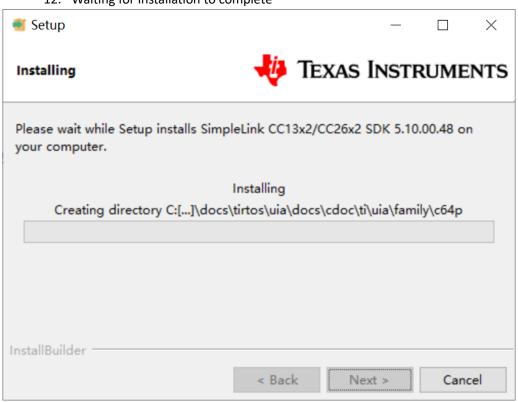




- Run an example/demo code
 - Find the option named "Import CCS project..."

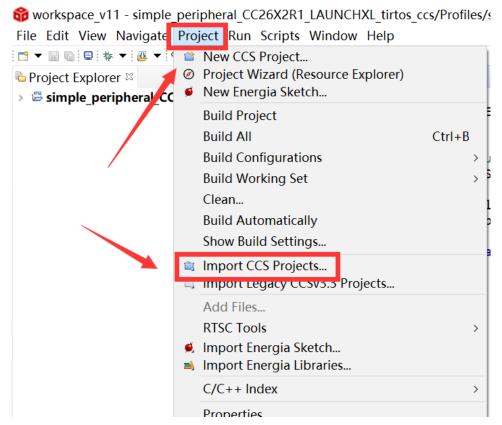


2. According to the following path to find the project: ti\simplelink_cc13x2_26x2_sdk_5_10_00_48\examples\rtos\CC1352P_2 _LAUNCHXL\ble5stack\simple_peripheral\tirtos\ccs



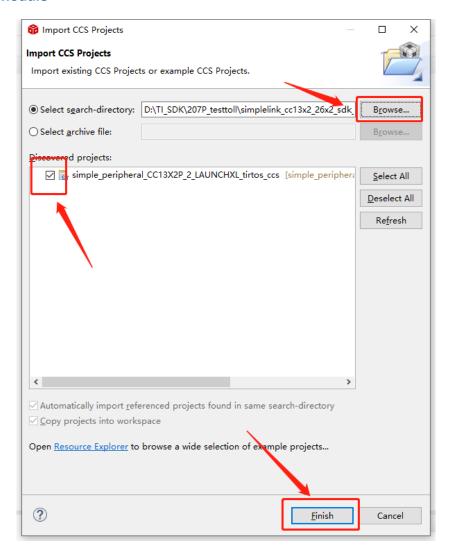


3. Open the file "simple_peripheral.syscfg"

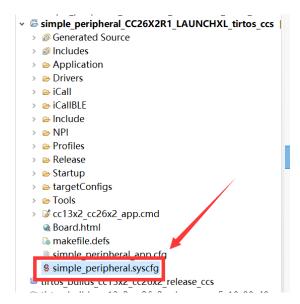




4. Click the "Device Configuration", change "0xC1" to "0x00" and close the file

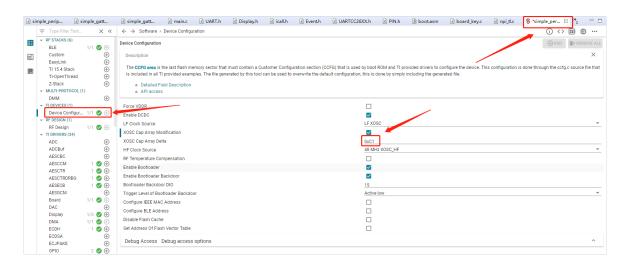


5. Save changes

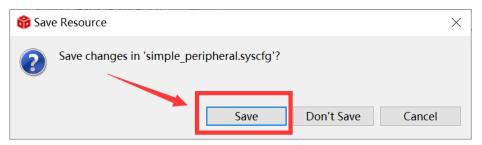


6. Right Click the project to build project



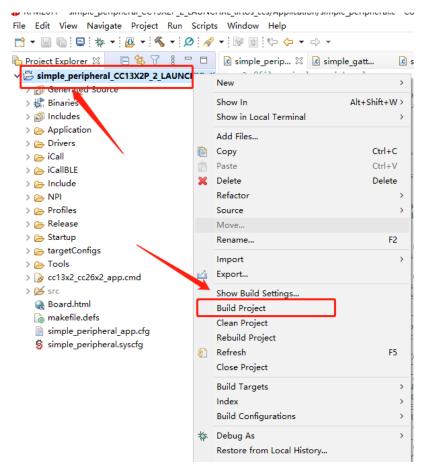


7. Click this bug icon (means download and debugging)



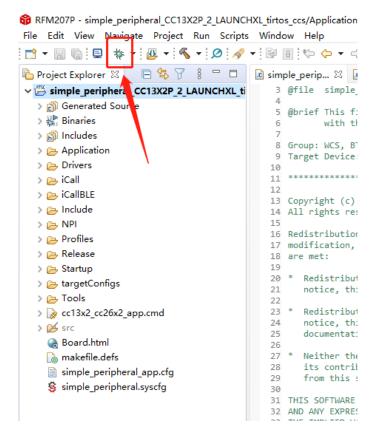


8. Download and start nRF Connect (an APP on your mobile device)

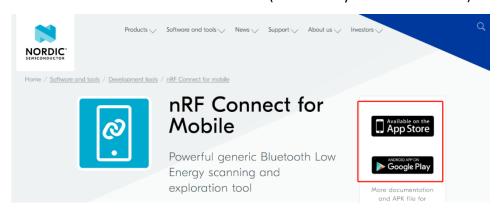


9. Click on this option to start debugging



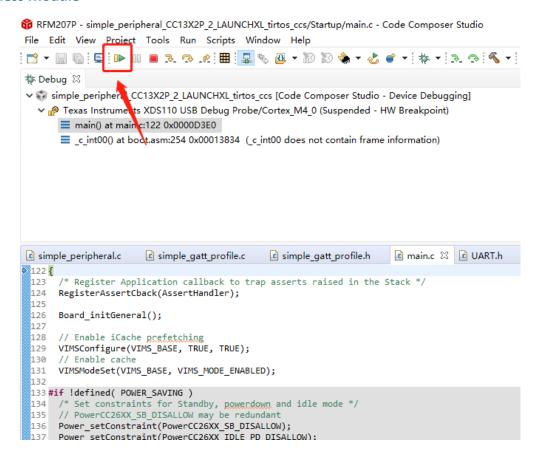

10. BDE-RFM207P is advertising, you can receive the signal on nRF Connect, then click "connect" to connect the mobile phone and the BDE-RFM207P



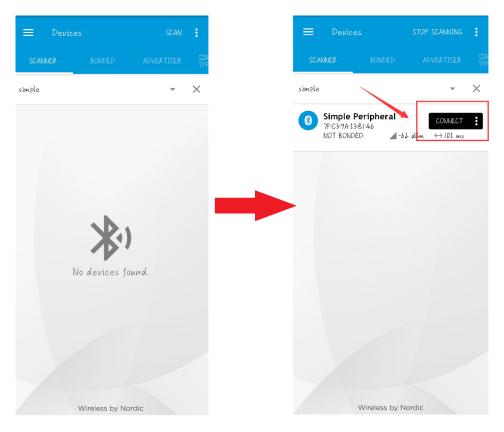

11. Find the file which is named "simple_gatt_profile.c" and the function which is named "simpleProfile WriteAttrCB"

```
😚 RFM207P - simple_peripheral_CC13X2P_2_LAUNCHXL_tirtos_ccs/Profiles/simple_gatt_profile.c - Code Co
 File Edit View Project Tools Run Scripts Window Help
🏇 Debug ☒

▼ Simple peripheral CC13X2P 2 LAUNCHXL tirtos ccs [Code Composer Studio - Device Debugging]


     Texas Instruments XDS110 USB Debug Probe/Cortex_M4_0 (Running)
                                                    ımpıe_gatt_profile.h
                        @ main.c
                                                                                     .c U/
 simple_peripheral.c
      * @return
  678 */
  679
  680
  681
  682 bStatus
               simpleProfile_WriteAttrCB(uin
  683
                                           gattAttribute_t *pAttr,
                                           uint8_t *pValue, uint16_t len,
uint16_t offset, uint8_t method)
  684
  685
  686
       bStatus_t status = SUCCESS;
uint8 notifyApp = 0xFF;
  687
  688
  689
  690
       if ( pAttr->type.len == ATT_BT_UUID_SIZE )
  691
  692
         // 16-bit UUID
         uint16 uuid = BUILD_UINT16( pAttr->type.uuid[0], pAttr->type.uuid[1]);
switch ( uuid )
  693
  694
  695
  696
           case SIMPLEPROFILE_CHAR1_UUID:
  697
               //Validate the value
// Make sure it's not a blob open
  698
```



12. Find "pValue" in the function and set a breakpoint at the same line

```
File Edit View Project Tools Run Scripts Window Help
| Market | 
                                                                                                                                                                                                                                                                                                                    E % 8
  ♦ Debug ☒
                     Texas Instruments XDS110 USB Debug Probe/Cortex_M4_0 (Running)
 simple_peripheral.c
                                                                                           la main.c
                                                                                                                                        ■ simple_gatt_profile.c >
    689
                                                        else
     690
     691
                                                                  status = ATT_ERR_ATTR_NOT_LONG;
     692
      693
     694
                                                         //Write the value
     695
                                                        if ( status == SUCCESS )
     696
                                                                  uint8 *pCurValue = (uint8 *)pAttr->pValue;
     697
     698
                                                                  *pCurValue = pValue[0];
      699
   700
701
                                                                  if( pAttr->pValue
                                                                                                                                                     == &simpleProfileChar1 )
                                                                  {
     702
                                                                          notifyApp = SIMPLEPROFILE_CHAR1;
      703
      704
                                                                 else
      705
                                                                  {
      706
                                                                           notifyApp = SIMPLEPROFILE_CHAR3;
      707
                                                                 }
     708
```

13. Click the up arrow to send a message to the BDE-RFM207P

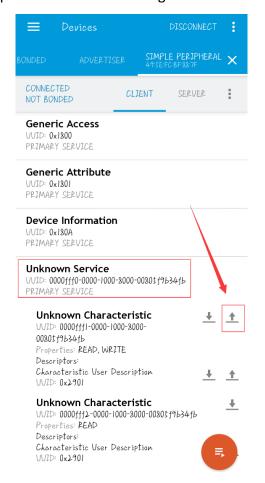




14. Send 0x11 to the BDE-RFM207P



15. The program stops at the breakpoint, the value received is 0x11

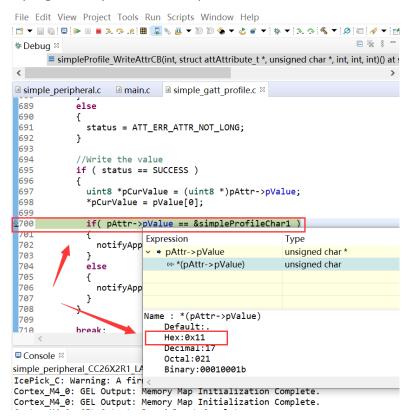

By far you should've built your first application successfully.

BDE-RFM207P USER GUIDE



Wireless Module User Guide

For further development, please check out the CC2652P data sheet, product information and support | TI.com page and download the User guide (https://www.ti.com/lit/pdf/swcu185)

Other Resources

Mac OS Installer for SimpleLink CC13X2 26X2 SDK

Linux Installer for SimpleLink CC13X2 26X2 SDK

Mac OS Installer for Code Composer Studio IDE

Linux Installer for Code Composer Studio IDE

CC2652P SimpleLink™ Multiprotocol 2.4 GHz Wireless MCU With Integrated Power Amplifier 数据表 (Rev. B)

Windows Installer for SmartRF Flash Programmer 2

More Questions:

Please search existing answers on TI E2E support forums

Contact your local TI sales representative.

Or

Contact BDE Technology, Inc.

China:

B2-403, 162 Science Ave, Huangpu District, Guangzhou, 510663

Tel: +86-020-28065335

Website: http://www.bdecomm.com/cn/ Email: shu@bdecomm.com

USA:

67 E Madison St, #1603A, Chicago, IL 60603

Tel: +1-312-379-9589

Website: http://www.bdecomm.com/ Email: info@bdecomm.com/