

BDE-RFM207-IN USER GUIDE

Introduction

This user guide is for BDE-RFM207-IN, a Wireless Module based on TI CC2652R. It is a quick start guide for how to connect the module with the evaluation board BDE-EVB07 or with the TI launchpad, and how to build the first application. It also shows a demo for how BDE-RFM207-IN receives a data packet that is sent from a mobile phone APP - Lightblue.

Get Ready

The following tools are recommended to develop with BDE-RFM207-IN.

Hardware tools:

- BDE-RFM207-IN (BDE-RFM207-IN-BDE Technology Inc. (bdecomm.com))
- BDE-ADP05 V1.0 (adaptor board)
- PC or Laptop
- BDE-EVB07 (<u>BDE-EVB07-BDE Technology Inc. (bdecomm.com)</u>) or
- TI Launchpad (LAUNCHXL-CC26X2R1 Evaluation board | TI.com)
- USB cable for power supply and debugging

Software tools:

- Terminal software such as CCS, IAR.
- CCS download
- Software Development Kit (SDK)
- Lightblue

Build Your First Application


Once have the Hardware and Software tools in place, please following the following steps:

A. Connect the Hardware

If chose EVB07:

Use USB cable to connect EVB07 and PC or laptop. Plug BDE-RFM207-IN with the adaptor board into the dev board and connect all the pins with Jumpers as the following picture shows.



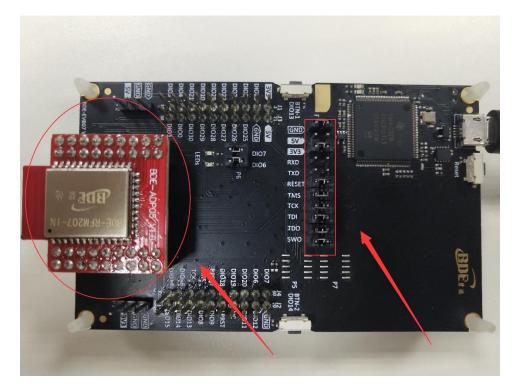

If chose TI Launchpad: The connection is as following.

DIO_0 1
DIO_1 2
DIO_1 2
DIO_2 3
DIO_2 3
DIO_2 4
DIO_4 5
DIO_6 7
DIO_6 7
DIO_7 8
DIO_6 7
DIO_7 8
DIO_7 8
DIO_2 8
DIO_2 6
DIO_5 6
DIO_5 6
DIO_5 6
DIO_5 6
DIO_5 6
DIO_5 7
DIO_7 8
DIO_2 7
DIO_7 8
DIO_2 7
DIO_7 8
DIO_2 7
DIO_2 7
DIO_2 7
DIO_2 7
DIO_2 8
DIO_2 6
DIO_2 7
DIO_2 7
DIO_2 8
DIO_2 7
DIO_2 7
DIO_2 8
DIO_2 7
DIO_2 7
DIO_2 7
DIO_2 8
DIO_2 7
DIO_2

BDE-RFM207-IN USER GUIDE



Wireless Module User Guide

Connection Designator	BDE-RFM207	LaunchPad Pin
3V3 Power	VDD	3V3
Ground	GND	GND
RST	RST	RESET
TMS	TMS	TMS
ТСК	TCK	TCK
TDO	DIO16	TDO
TDI	DIO17	TDI
RXD	DIO2	RXD
TXD	DIO3	TXD

Optional: TDO, TDI, RXD, TXD


B. Build the Application

Download and install the CCS and SDK

From the above links, follow the instructions in the following steps to download and install the CCS and SDK.


CCS Installation

1. Click on this option

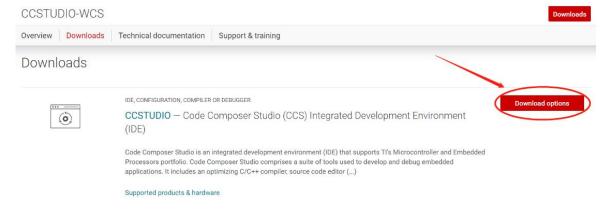


2. Select an option to download CCS



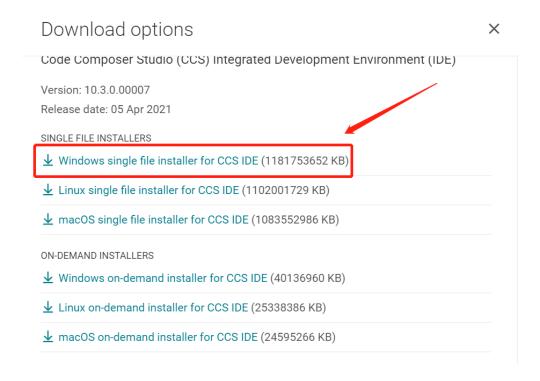


3. Unzip the package to a local disc



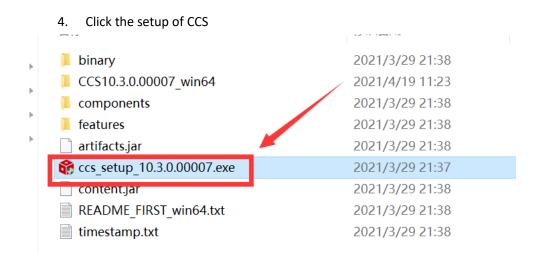

5. Click "Next"



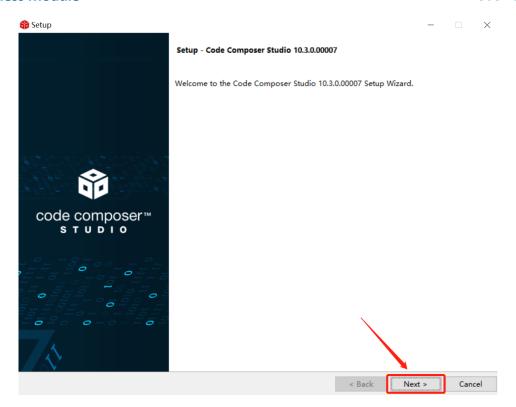


6. Select the default option






7. Click "Next"

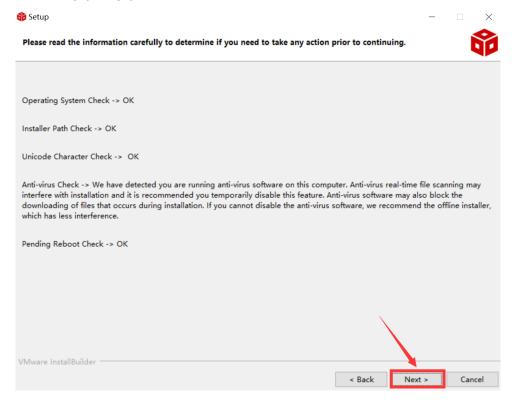


8. Select the Installation Directory

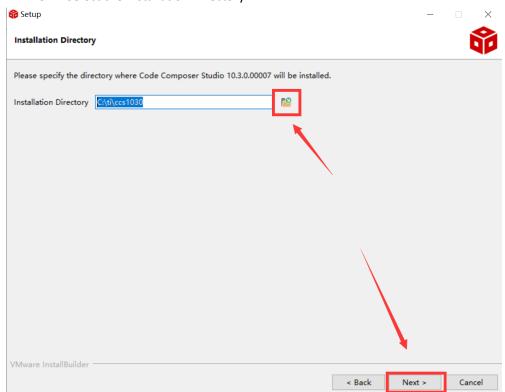




9. Select the default option

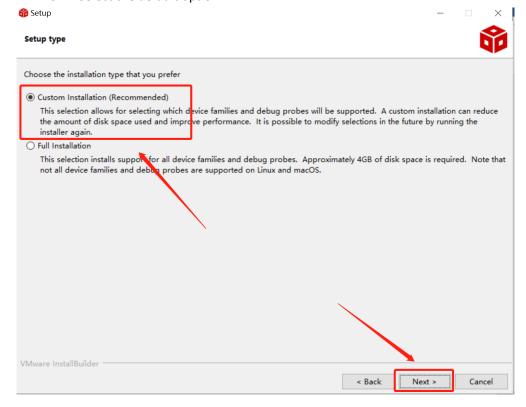


10. Select the component

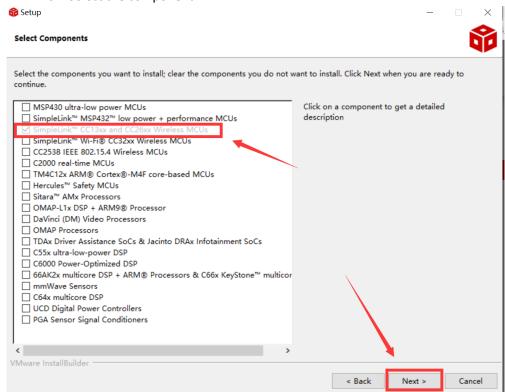






12. Click "Next"

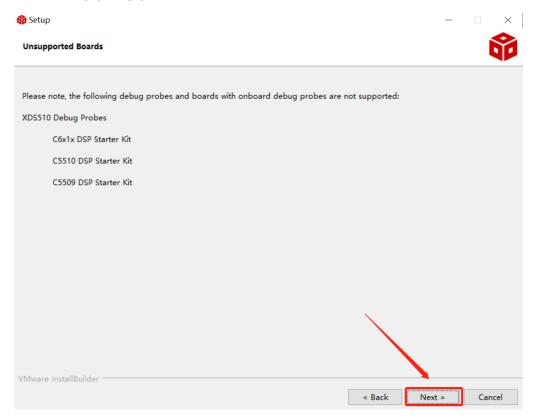




13. Click "Next"

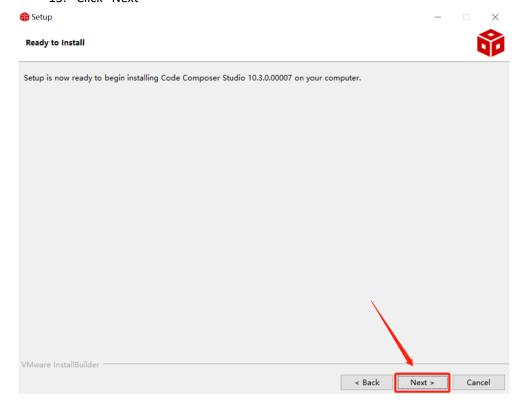


14. Waiting for installation to complete

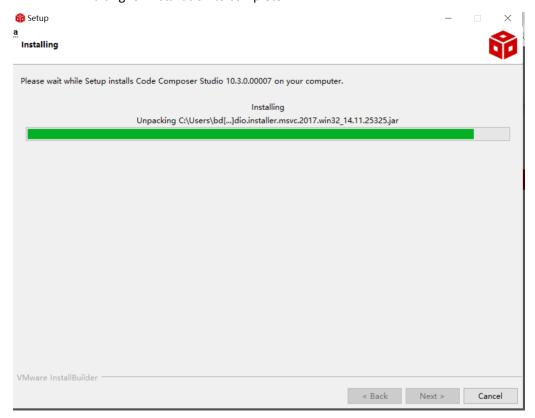




- Software Development Kit (SDK) installation
 - 1. Click on this option

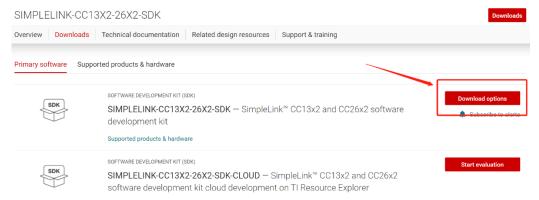

2. Select an option you need to download SDK

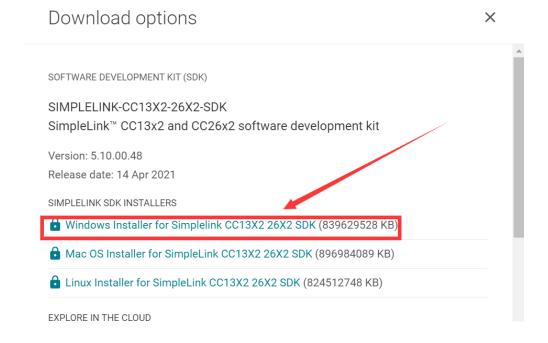


3. Log in to your TI account, if you are a new user, register a TI account first



myTl account

myTI FAQ

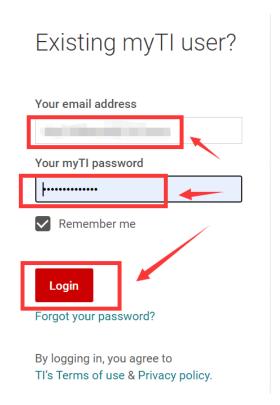

4. Select "civil" if your application is for civil use





5. Select "Yes" and submit

compliance with any such import, use, or export restrictions.

- \cdot I / We hereby certify that we will adhere to the conditions above.
- I / We do not know of any additional facts different from the above.
- I / We take responsibility to comply with these terms.
- I / We understand we are responsible to abide by the most current. versions of the Export Administration Regulations and other U.S. export and sanctions laws.



6. Download SDK

TI Home

TI Request

You have been approved to receive this file. Click "Download" to proceed.


In a few moments, you will also receive an email with the link to this file.




Thank you, Texas Instruments

7. Installation



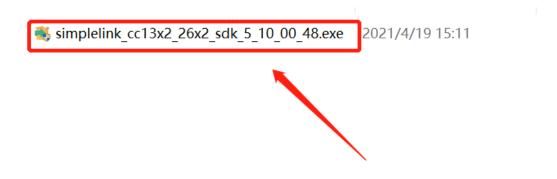


8. Click "Next"

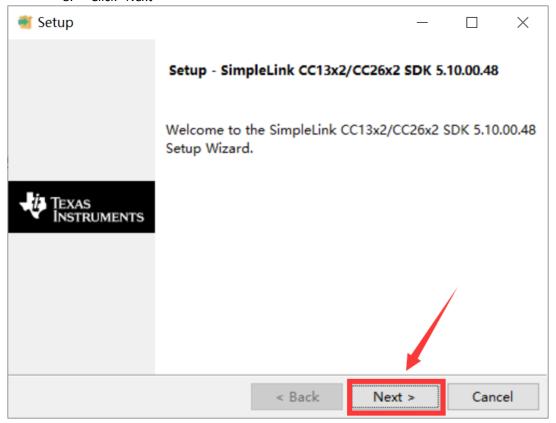


9. Select the default option



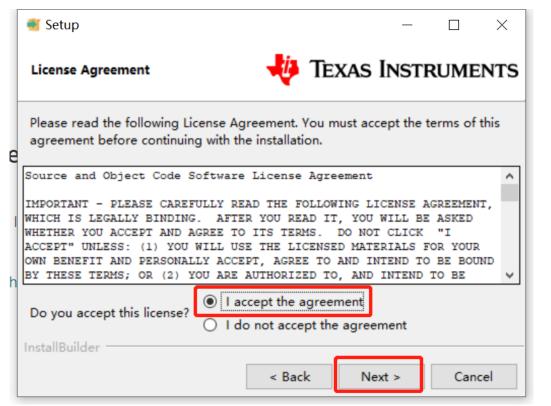


10. Select the Installation directory

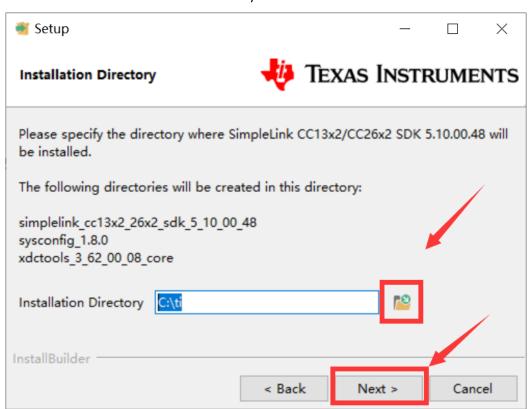




11. Click "Next"

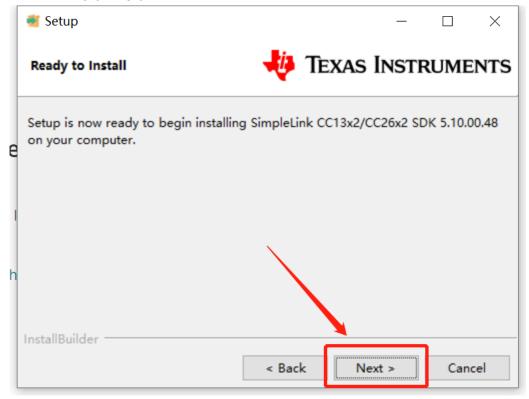


12. Waiting for installation to complete

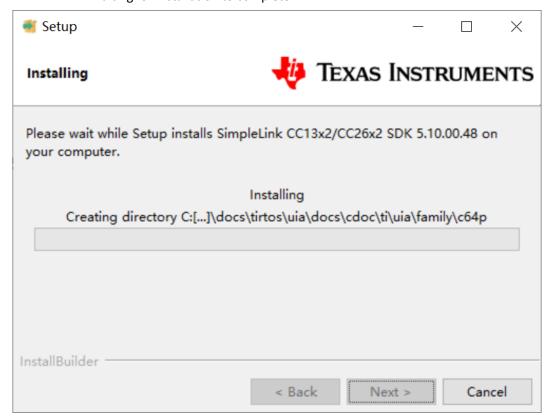




- Run an example/demo code
 - 1. Find the option named "Import CCS project..."

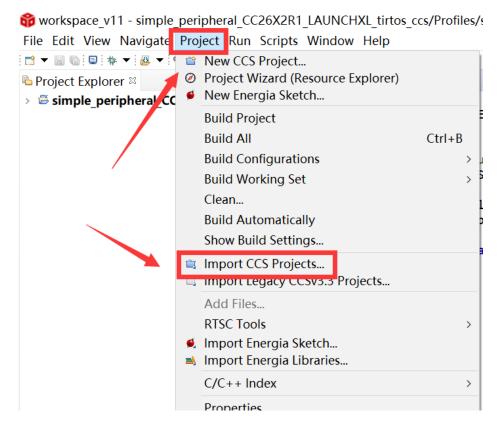


 According to the following path to find the project: ti\simplelink_cc13x2_26x2_sdk_5_10_00_48\examples\rtos\CC26X2R1_L AUNCHXL\ble5stack\simple_peripheral\tirtos\ccs



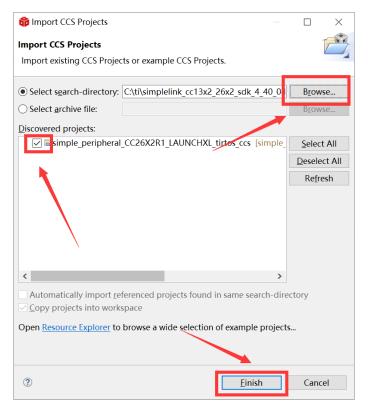


3. Right Click the project to build project

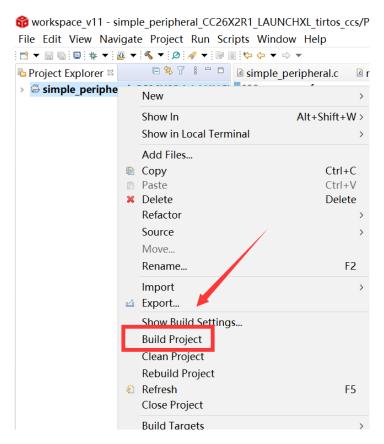



4. Click this bug icon (means download and debugging)

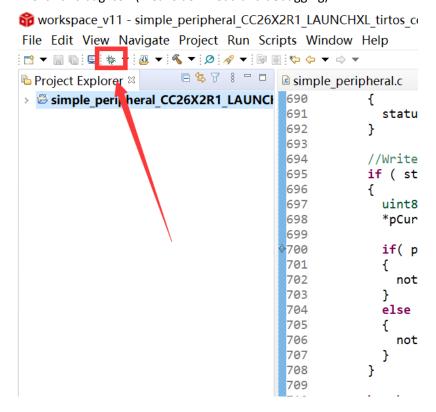

- 5. <u>Download and start Lightblue</u> (an APP on your mobile device)
- 6. Click on this option to start debugging




```
😚 workspace v11 - simple peripheral CC26X2R1 LAUNCHXL tirtos ccs/Startup/main.c
File Edit View Project Tools Run Scripts Window Help
| 😭 ▼ 🔚 🐚 | 🗐 📭 📗 📵 ⋽. ७. № | ⊞ 🖳 🦠 😃 ▼ 🐌 🌣 ▼ 🕹 💣 ▼ | 🎋 ▼ | ⋽. ७ | 🦠 ▼ | Ø | €

♦ Debug 

□
       = main() at main.c:122 0x0000D618
 <
isimple peripheral.c
                      🏿 main.c 🛛 🚨 simple gatt profile.c
 113 * @param
                      None.
 114 *
 115 * output parameters
 116 *
 117 * @param
                      None.
 118 *
 119 * @return
                      None.
 120 */
 121 int main()
 122 [
 123
       /* Register Application callback to trap asserts raised in the
 124
      RegisterAssertCback(AssertHandler);
 125
 126
      Board_initGeneral();
 127
 128
      // Enable iCache prefetching
 129
      VIMSConfigure(VIMS_BASE, TRUE, TRUE);
```

7. BDE-RFM207-IN is advertising, you can receive the signal on Lightblue, then click "connect" to connect the mobile phone and the BDE-RFM207-IN

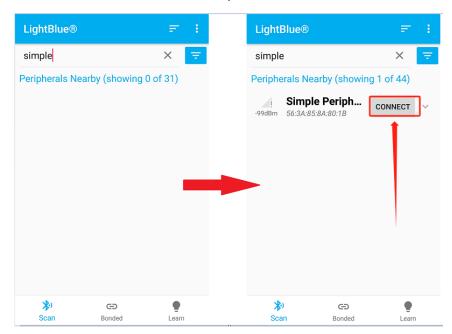

8. Find the file which is named "simple_gatt_profile.c" and the function which is named "simpleProfile WriteAttrCB"



```
奛 workspace v11 - simple peripheral CC26X2R1 LAUNCHXL tirtos ccs/Profiles/simple gatt p
File Edit View Project Tools Run Scripts Window Help

    □ ¾ 8 □


Texas Instruments XDS110 USB Debug Probe/Cortex M4 0 (Running)
<
                            🖻 simple gatt profile.c 🛭
simple peripheral.c
                   🖻 main.c
 660 *AA
 661 * @return SUCCESS, blePending or Failure
 662 */
 663 bStatus
             simpleProfile_WriteAttrCB( int16_t connHandle,
 664
                                       gattAttribute t *pAttr,
 665
                                        uint8_t *pValue, uint16_t len,
 666
                                       uint16_t offset, uint8_t method)
 667
      bStatus_t status = SUCCESS;
 668
      uint8 notifyApp = 0xFF;
 669
 670
      if ( pAttr->type.len == ATT_BT_UUID_SIZE )
 671
 672
        // 16-bit UUID
 673
 674
        uint16 uuid = BUILD_UINT16( pAttr->type.uuid[0], pAttr->type.uuid[1
 675
        switch ( uuid )
 676
 677
          case SIMPLEPROFILE CHAR1 UUID:
          case SIMPLEPROFILE_CHAR3_UUID:
 678
 679
 680
            ///alidate the value
```

9. Find "pValue" in the function and set a breakpoint at the same line

```
😚 workspace v11 - simple peripheral CC26X2R1 LAUNCHXL tirtos ccs/Profiles/simple gat
File Edit View Project Tools Run Scripts Window Help
E % 8
Texas Instruments XDS110 USB Debug Probe/Cortex M4 0 (Running)
simple_peripheral.c
                   🖟 main.c
                           🗟 simple gatt profile.c 🛭
689
           else
 690
           {
 691
             status = ATT_ERR_ATTR_NOT_LONG;
 692
           }
 693
 694
            //Write the value
           if ( status == SUCCESS )
 695
 696
             uint8 *pCurValue = (uint8 *)pAttr->pValue;
 697
              *pCurValue = pValue[0];
 698
 699
700
              ir( pAttr->pValue == &simpleProfileChar1 )
 701
               notifyApp = SIMPLEPROFILE_CHAR1;
 702
 703
 794
             else
 705
 706
               notifyApp = SIMPLEPROFILE_CHAR3;
 707
 708
```


10. Click the up arrow to send a message to the BDE-RFM207-IN



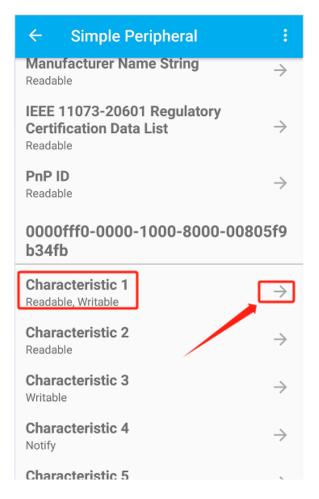


11. Send 0x11 to the BDE-RFM207-IN



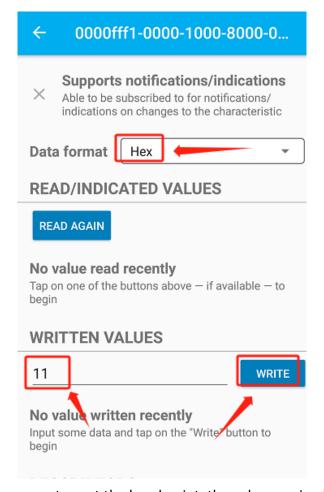

12. The program stops at the breakpoint, the value received is 0x11



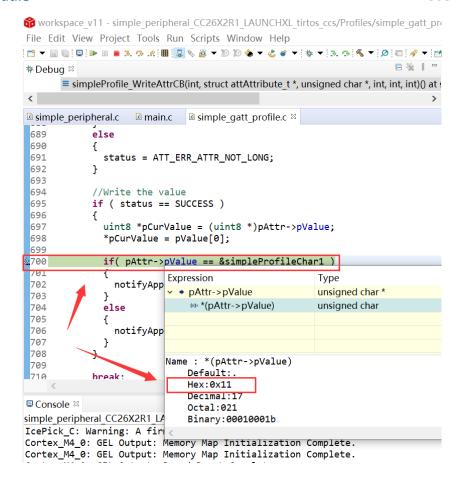

By far you should've built your first application successfully.

For further development, please check out the CC2652R data sheet, product information and support | Tl.com page and download the User guide (https://www.ti.com/lit/pdf/swcu185)

Other Resources

Mac OS Installer for SimpleLink CC13X2 26X2 SDK

Linux Installer for SimpleLink CC13X2 26X2 SDK

Mac OS Installer for Code Composer Studio IDE

Linux Installer for Code Composer Studio IDE

CC2652R SimpleLink™ Multiprotocol 2.4 GHz Wireless MCU

Windows Installer for SmartRF Flash Programmer 2

BDE-RFM207-IN USER GUIDE



Wireless Module User Guide

More Questions:

Please search existing answers on TI E2E support forums

Contact your local TI sales representative.

Or

Contact BDE Technology, Inc.

China:

B2-403, 162 Science Ave, Huangpu District, Guangzhou, 510663

Tel: +86-020-28065335

Website: http://www.bdecomm.com/cn/ Email: shu@bdecomm.com/cn/

USA:

67 E Madison St, #1603A, Chicago, IL 60603

Tel: +1-312-379-9589

Website: http://www.bdecomm.com/ Email: info@bdecomm.com/